

# QHub User Manual

QHub Quantum System Hub



Zurich  
Instruments

# QHub User Manual

Zurich Instruments AG

Revision 24.10

Copyright © 2008-2024 Zurich Instruments AG

The contents of this document are provided by Zurich Instruments AG (ZI), "as is". ZI makes no representations or warranties with respect to the accuracy or completeness of the contents of this publication and reserves the right to make changes to specifications and product descriptions at any time without notice.

LabVIEW is a registered trademark of National Instruments Inc. MATLAB is a registered trademark of The MathWorks, Inc. All other trademarks are the property of their respective owners.

# Table of Contents

Declaration of Conformity .....	
1. Change Log.....	1
1.1. Release 24.10 .....	1
2. Getting Started .....	2
2.1. Quick Start Guide.....	2
2.2. Inspect the Package Contents .....	3
2.3. Handling and Safety Instructions .....	4
2.4. Software Installation .....	5
2.5. Connecting to the Instrument .....	12
2.6. Software Update .....	23
2.7. Troubleshooting.....	24
3. Functional Overview .....	28
3.1. Features .....	28
3.2. Front Panel Tour .....	28
3.3. Back Panel Tour .....	30
3.4. Ordering Guide.....	31
4. Functional Description LabOne User Interface .....	32
4.1. User Interface Overview .....	32
4.2. Ports Tab .....	34
4.3. Config Tab .....	35
4.4. Device Tab .....	39
4.5. File Manager Tab .....	41
4.6. ZI Labs Tab .....	42
5. Specifications.....	43
5.1. QCCS system specifications.....	43
5.2. Synchronization and real-time data exchange interface.....	43
5.3. Analog Interface Specifications .....	43
5.4. General Specifications .....	44
6. Device Node Tree .....	46
6.1. Introduction .....	46
6.2. Reference Node Documentation .....	49

# CE Declaration of Conformity



The manufacturer

Zurich Instruments  
Technoparkstrasse 1  
8005 Zurich  
Switzerland

declares that the product

QHub, QHub Quantum System Hub

is in conformity with the provisions of the relevant Directives and Regulations of the Council of the European Union:

Directive / Regulation	Conformity proven by compliance with the standards
2014/30/EU (Electromagnetic compatibility [EMC])	EN 61326-1:2013, EN 55011:2016, EN 55011:2016/A1:2017, EN 55011:2016/A11:2020 (Group 1, Class A and B equipment)
2014/35/EU (Low voltage equipment [LVD])	EN 61010-1:2010, EN 61010-1:2010/A1:2019, EN 61010-1:2010/A1:2019/AC:2019-04
2011/65/EU, as amended by 2015/863 and 2017/2102 (Restriction of the use of certain hazardous substances [RoHS])	EN IEC 63000:2018
(EC) 1907/2006 (Registration, Evaluation, Authorisation, and Restrictions of Chemicals [REACH])	-

Zurich, October 20<sup>th</sup>, 2022

Flavio Heer, CTO

# UKCA Declaration of Conformity



The manufacturer

Zurich Instruments  
Technoparkstrasse 1  
8005 Zurich  
Switzerland

declares that the product

QHub, QHub Quantum System Hub

is in conformity with the provisions of the relevant UK Statutory Instruments:

Statutory Instruments	Conformity proven by compliance with the standards
S.I. 2016/1091 (Electromagnetic Compatibility Regulations)	EN 61326-1:2013, EN 55011:2016, EN 55011:2016/A1:2017, EN 55011:2016/A11:2020 (Group 1, Class A and B equipment)
S.I. 2016/1101 (Electrical Equipment (Safety) Regulations)	EN 61010-1:2010, EN 61010-1:2010/A1:2019, EN 61010-1:2010/A1:2019/AC:2019-04
S.I. 2012/3032 (Restriction of the Use of Certain Hazardous Substances Regulations)	EN IEC 63000:2018

Zurich, October 20<sup>th</sup>, 2022

A handwritten signature in black ink that reads 'Flavio Heer'.

Flavio Heer, CTO

# 1. Change Log

## 1.1. Release 24.10

**Release date:** 31-Oct-2024

First version of QHub User Manual.

## 2. Getting Started

This first chapter guides you through the initial set-up of your QHub Instrument in order to make your first measurements. This chapter comprises:

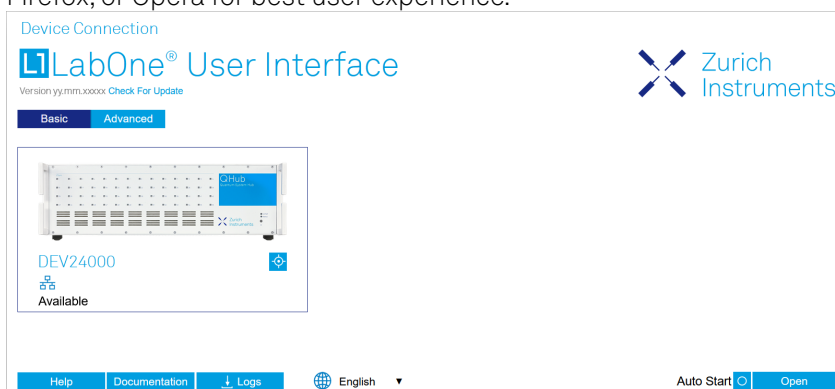
- A Quick Start Guide for the impatient
- Inspecting the package content and accessories
- List of essential handling and safety instructions
- Connecting to the QHub Instrument
- Handy list of troubleshooting guidelines

This chapter is delivered as a hard copy with the instrument upon delivery. It is also the first chapter of the QHub User Manual.

### 2.1. Quick Start Guide

This page addresses all the people who have been impatiently awaiting their new gem to arrive and want to see it up and running quickly. Please proceed with the following steps:

1. Inspect the package content. Besides the Instrument there should be a country-specific power cable, a USB cable, an Ethernet cable and a hard copy of the user manual [Getting Started](#)
2. Check the Handling and Safety Instructions in [Handling and Safety Instructions](#).
3. Download and install the latest LabOne software from the [Zurich Instruments Download Center](#). Choose the download file that fits your computer (e.g. Windows with 64-bit addressing). For more detailed information see [Software Installation](#).
4. Connect the Instrument to the power line. Turn it on and connect it to a switch in the LAN using the Ethernet cable.
5. Start the LabOne User Interface from the Windows Start Menu. The default web browser will open and display your instrument in a start screen as shown below. Use Chrome, Edge, Firefox, or Opera for best user experience.



6. The LabOne User Interface start-up screen will appear. Click the **Open** button on the lower right of the page. The default configuration will be loaded and the first signals can be generated. If the user interface does not start up successfully, please refer to [Connecting to the Instrument](#).

If any problems occur whilst setting up the instrument and software please see the [Troubleshooting](#) at the end of this chapter.

The functional description of the LabOne User Interface [Functional Overview](#) provides a general introduction to the various tools and settings tabs with tables in each section describing every UI element. For specific application know-how, the [blog section](#) of the Zurich Instruments website will serve as a valuable resource that is constantly updated and expanded.

#### Note

QHub needs to warm up for 30 minutes after power-up. Do not lock to external reference clock or start triggering before it's ready. The CLK LED on the bottom right of the LabOne user interface will turn green when the instrument is ready to use.

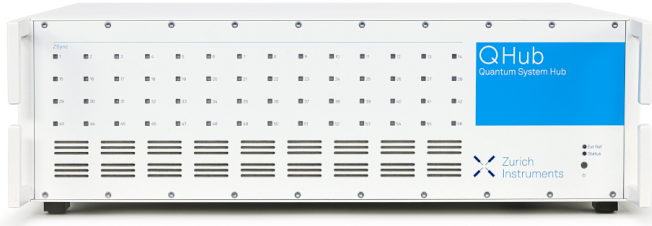






## 2.2. Inspect the Package Contents

If the shipping container appears to be damaged, keep the container until you have inspected the contents of the shipment and have performed basic functional tests.

Please verify:

- You have received 1 Zurich Instruments QHub Instrument
- You have received 1 power cord with a power plug suited to your country
- You have received 1 USB 3.0 cable and/or 1 LAN cable (category 5/6 required)
- You have received a printed version of the "Getting Started" section
- The "Next Calibration" sticker on the rear panel of the Instrument indicates approximately 2 years ahead in time. Zurich Instruments recommends calibration intervals of 2 years
- The instrument serial number and its MAC address are displayed on a sticker on the back panel

Table 2.1: Package contents for the QHub

	QHub instrument
	Power cord (e.g. EU norm)
	USB 3.0 cable
	Power inlet with power switch and fuse holder
	LAN / Ethernet cable (category 5/6 required)
	"Next Calibration" sticker on the back panel of the instrument
	The serial number and MAC address sticker on the back panel of the instrument

The QHub Instrument is equipped with a multi-mains switched power supply, and therefore can be connected to most power systems in the world. The fuse holder is integrated with the power inlet, and can be extracted by grabbing the holder with two small screwdrivers at the top and at the bottom at the same time. A spare fuse is contained in the fuse holder. The fuse description is mentioned in the specifications chapter.



Carefully inspect your instrument. If there is mechanical damage or the instrument does not pass the basic tests, then you should immediately notify the Zurich Instruments support team at [support@zhinst.com](mailto:support@zhinst.com).

## 2.3. Handling and Safety Instructions

The QHub Instrument is a sensitive piece of electronic equipment, and under no circumstances should its casing be opened, as there are high-voltage parts inside which may be harmful to human beings. There are no serviceable parts inside the instrument. Do not install substitute parts or perform any unauthorized modification to the product. Opening the instrument immediately voids the warranty provided by Zurich Instruments.

Do not use this product in any manner not specified by the manufacturer. The protective features of this product may be affected if it is used in a way not specified in the operating instructions.

The following general safety instructions must be observed during all phases of operation, service, and handling of the instrument. The disregard of these precautions and all specific warnings elsewhere in this manual may negatively affect the operation of the equipment and its lifetime.

Zurich Instruments assumes no liability for the user's failure to observe and comply with the instructions in this user manual.

Table 2.2: Safety Instructions

Ground the instrument	The instrument chassis must be correctly connected to earth ground by means of the supplied power cord. The ground pin of the power cord set plug must be firmly connected to the electrical ground (safety ground) terminal at the mains power outlet. Interruption of the protective earth conductor or disconnection of the protective earth terminal will cause a potential shock hazard that could result in personal injury and potential damage to the instrument.
Electromagnetic environment	This equipment has been certified to conform with industrial electromagnetic environment as defined in EN 61326-1:2020. Emissions, that exceed the levels required by the document referenced above, can occur when connected to a test object.
Measurement category	This equipment is of measurement category I (CAT I). Do not use it for CAT II, III, or IV. Do not connect the measurement terminals to mains sockets.
Maximum ratings	The specified electrical ratings for the connectors of the instrument should not be exceeded at any time during operation. Please refer to the <a href="#">Specifications</a> for a comprehensive list of ratings.
Do not service or adjust anything yourself	There are no serviceable parts inside the instrument.
Software updates	Frequent software updates provide the user with many important improvements as well as new features. Only the last released software version is supported by Zurich Instruments.
Warnings	Instructions contained in any warning issued by the instrument, either by the software, the graphical user interface, the notes on the instrument or mentioned in this manual, must be followed.
Notes	Instructions contained in the notes of this user manual are of essential importance for correctly interpreting the acquired measurement data.
Location and ventilation	This instrument or system is intended for indoor use in an installation category II and pollution degree 2 environment as per IEC 61010-1. Do not operate or store the instrument outside the ambient conditions specified in the <a href="#">Specifications</a> section. Do not block the ventilator opening on the back or the air intake on the chassis side and allow a reasonable space for the air to flow.
Cleaning	To prevent electrical shock, disconnect the instrument from AC mains power and disconnect all test leads before cleaning. Clean the outside of the instrument using a soft, lint-free cloth slightly dampened with water. Do not use detergent or solvents. Do not attempt to clean internally.





AC power connection and mains line fuse	For continued protection against fire, replace the line fuse only with a fuse of the specified type and rating. Use only the power cord specified for this product and certified for the country of use. Always position the device so that its power switch and the power cord are easily accessible during operation.
Main power disconnect	Unplug product from wall outlet and remove power cord before servicing. Only qualified, service-trained personnel should remove the cover from the instrument.
RJ45 sockets labeled ZSync	The RJ45 sockets on the back panel labeled "ZSync" are not intended for Ethernet LAN connection. Connecting an Ethernet device to these sockets may damage the instrument and/or the Ethernet device.
Operation and storage	Do not operate or store the instrument outside the ambient conditions specified in the <a href="#">Specifications</a> section.
Handling	Handle with care. Do not drop the instrument. Do not store liquids on the device, as there is a chance of spillage resulting in damage.
Safety critical systems	Do not use this equipment in systems whose failure could result in loss of life, significant property damage or damage to the environment.

If you notice any of the situations listed below, immediately stop the operation of the instrument, disconnect the power cord, and contact the support team at Zurich Instruments, either through the website form or through [email](#).

Table 2.3: Unusual Conditions

Fan is not working properly or not at all	Switch off the instrument immediately to prevent overheating of sensitive electronic components.
Power cord or power plug on instrument is damaged	Switch off the instrument immediately to prevent overheating, electric shock, or fire. Please exchange the power cord only with one for this product and certified for the country of use.
Instrument emits abnormal noise, smell, or sparks	Switch off the instrument immediately to prevent further damage.
Instrument is damaged	Switch off the instrument immediately and ensure it is not used again until it has been repaired.

Table 2.4: Symbols

	Earth ground
	Chassis ground
	Caution. Refer to accompanying documentation
	DC (direct current)

## 2.4. Software Installation

The QHub Instrument is operated from a host computer with the LabOne software. To install the LabOne software on a computer, administrator rights may be required. In order to simply run the software later, a regular user account is sufficient. Instructions for downloading the correct version of the software packages from the Zurich Instruments website are described below in the platform-dependent sections. It is recommended to regularly update to the latest software version provided by Zurich Instruments. Thanks to the Automatic Update check feature, the update can be initiated with a single click from within the user interface, as shown in [Software Update](#).

### 2.4.1. Installing LabOne on Windows

The installation packages for the Zurich Instruments LabOne software are available as Windows installer .msi packages. The software is available on the [Zurich Instruments Download Center](#). Please ensure that you have administrator rights for the PC on which the software is to be installed. See [LabOne compatibility](#) for a comprehensive list of supported Windows systems.

### 2.4.2. Windows LabOne Installation

1. The QHub Instrument should not be connected to your computer during the LabOne software installation process.
2. Start the LabOne installer program with a name of the form **LabOne64-XX.XX.XXXXX.msi** by a double click and follow the instructions. Windows Administrator rights are required for installation. The installation proceeds as follows:
  - On the welcome screen click the **Next** button.

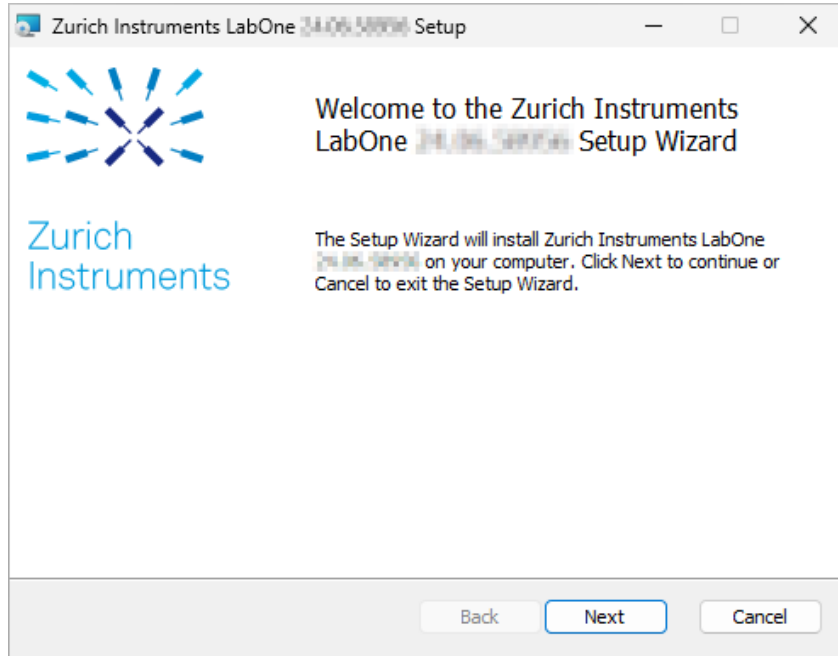


Figure 2.1: Installation welcome screen

- After reading through the Zurich Instruments license agreement, check the "I accept the terms in the License Agreement" check box and click the **Next** button.
- Review the features you want to have installed. For the QHub Instrument the "QHub Series Device", "LabOne User Interface" and "LabOne APIs" features are required. Please install the features for other device classes as well, if required. To proceed click the **Next** button.

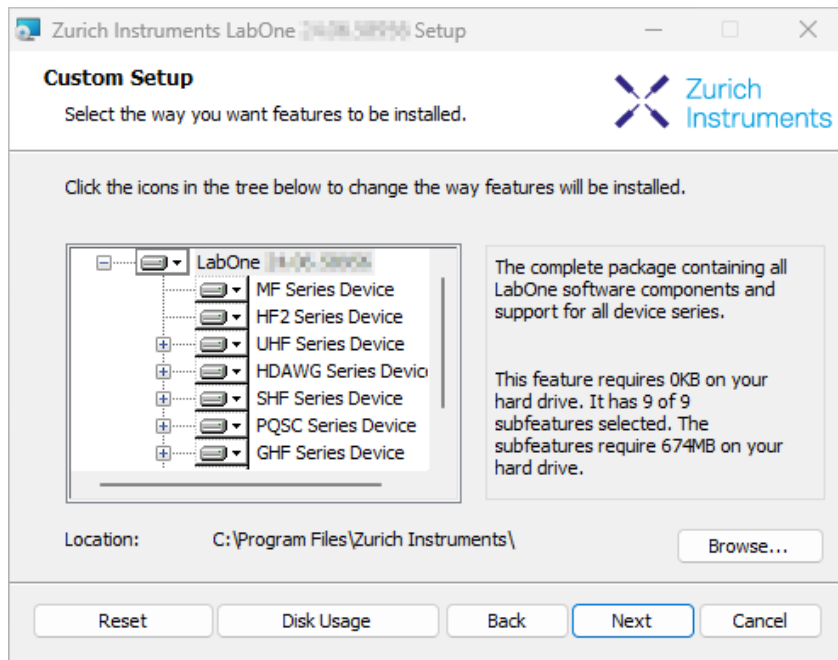


Figure 2.2: Custom setup screen

- Select whether the software should periodically check for updates. Note, the software will still not update automatically. This setting can later be changed in the user interface. If you would like to install shortcuts on your desktop area, select "Create a shortcut for this program on the desktop". To proceed click the **Next** button.

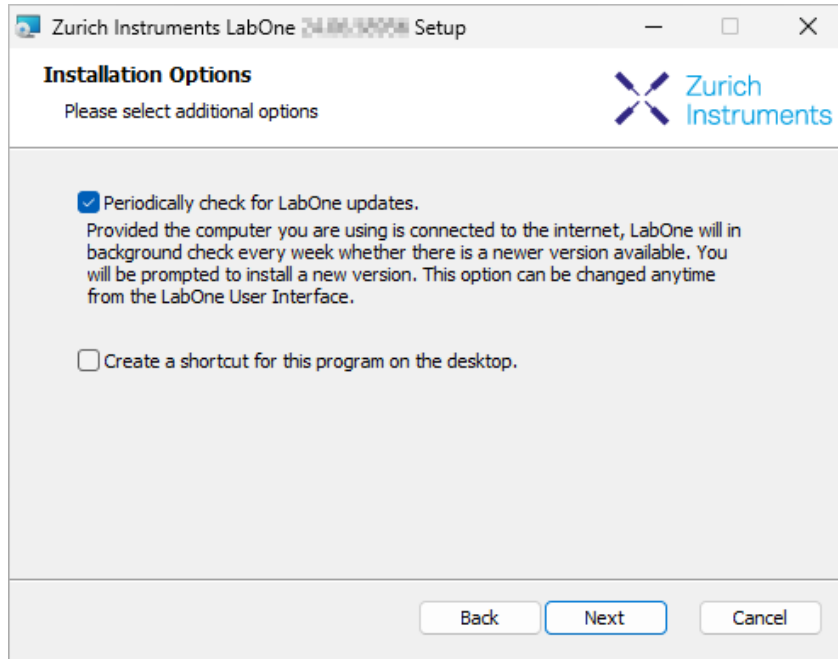


Figure 2.3: Automatic update check

- Click the **Install** button to start the installation process.
- Windows may ask up to two times to reboot the computer if you are upgrading. Make sure you have no unsaved work on your computer.

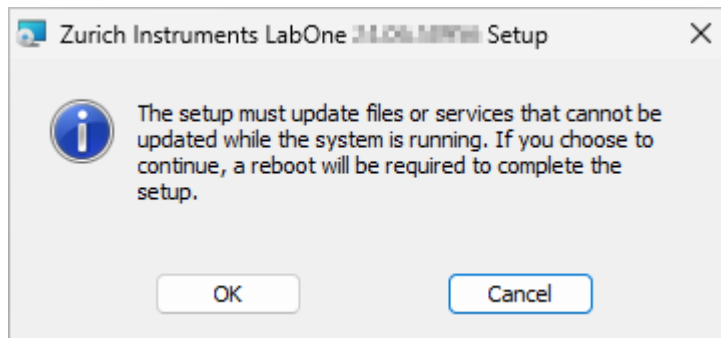


Figure 2.4: Installation reboot request

- During the first installation of LabOne, it is required to confirm the installation of some drivers from the trusted publisher Zurich Instruments. Click on **Install**.

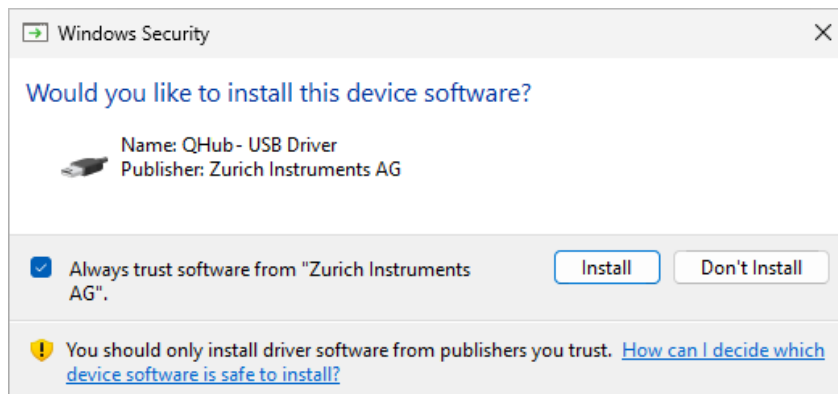


Figure 2.5: Installation driver acceptance

- Click **OK** on the following notification dialog.

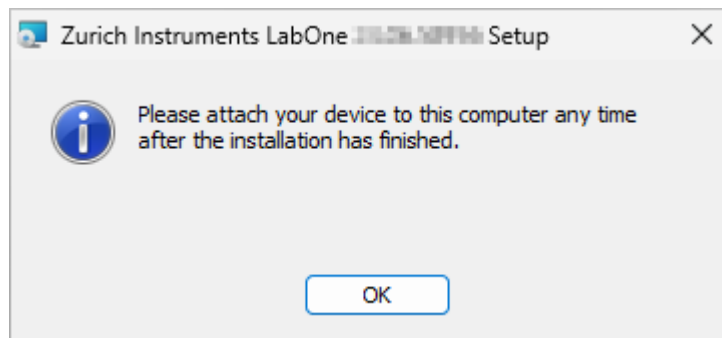


Figure 2.6: Installation completion screen

3. Click **Finish** to close the Zurich Instruments LabOne installer.
4. You can now start the LabOne User Interface as described in [LabOne Software Start-up](#) and choose an instrument to connect to via the Device Connection dialog shown in [Device Connection dialog](#).

## Warning

Do not install drivers from another source other than Zurich Instruments.

### 2.4.3. Start LabOne Manually on the Command Line

After installing the LabOne software, the Web Server and Data Server can be started manually using the command-line. The more common way to start LabOne under Windows is described in [LabOne Software Start-up](#). The advantage of using the command line is being able to observe and change the behavior of the Web and Data Servers. To start the Servers manually, open a command-line terminal (Command Prompt, PowerShell (Windows) or Bash (Linux)). For Windows, the current working directory needs to be the installation directory of the Web Server and Data Server. They are installed in the Program Files folder (usually: C:\Program Files) under \Zurich Instruments\LabOne in the WebServer and DataServer folders, respectively. The Web Server and Data Server (ziDataServer) are started by running the respective executable in each folder. Please be aware that only one instance of the Web Server can run at a time per computer. The behavior of the Servers can be changed by providing command line arguments. For a detailed list of all arguments see the command line help text:

```
$ ziWebServer --help
```

For the Data Server:

```
$ ziDataServer --help
```

One useful application of running the Webserver manually from a terminal window is to change the data directory from its default path in the user home directory. The data directory is a folder in which the LabOne Webserver saves all the measured data in the format specified by the user. Before running the Webserver from the terminal, the user needs to ensure there is no other instance of Webserver running in the background. This can be checked using the Tray Icon as shown below.

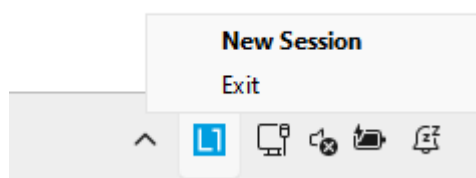


Figure 2.7: LabOne Tray Icon in Windows 11

The corresponding command line argument to specify the data path is `--data-path` and the command to start the LabOne Webserver with a non-default directory path, e.g., `C:\data` is

```
C:\Program Files\Zurich Instruments\LabOne\WebServer> ziWebServer --data-path "C:\data"
```

## Windows LabOne Uninstallation

To uninstall the LabOne software package from a Windows computer, one can open the "Installed apps" page from the Windows start menu and search for LabOne. By selecting the LabOne item in the list of apps, the user has the option to "Uninstall" or "Modify" the software package as shown in Figure 2.8.

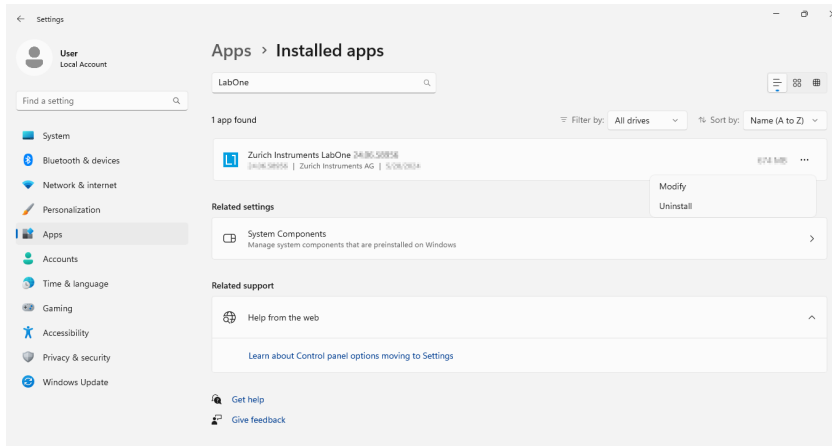


Figure 2.8: Uninstallation of LabOne on Windows computers

### Warning

Although it is possible to install a new version of LabOne on a currently-installed version, it is highly recommended to first uninstall the older version of LabOne from the computer and then, install the new version. Otherwise, if the installation process fails, the current installation is damaged and cannot be uninstalled directly. The user will need to first repair the installation and then, uninstall it.

In case a current installation of LabOne is corrupted, one can simply repair it by selecting the option "Modify" in Figure 2.8. This will open the LabOne installation wizard with the option "Repair" as shown in Figure 2.9.

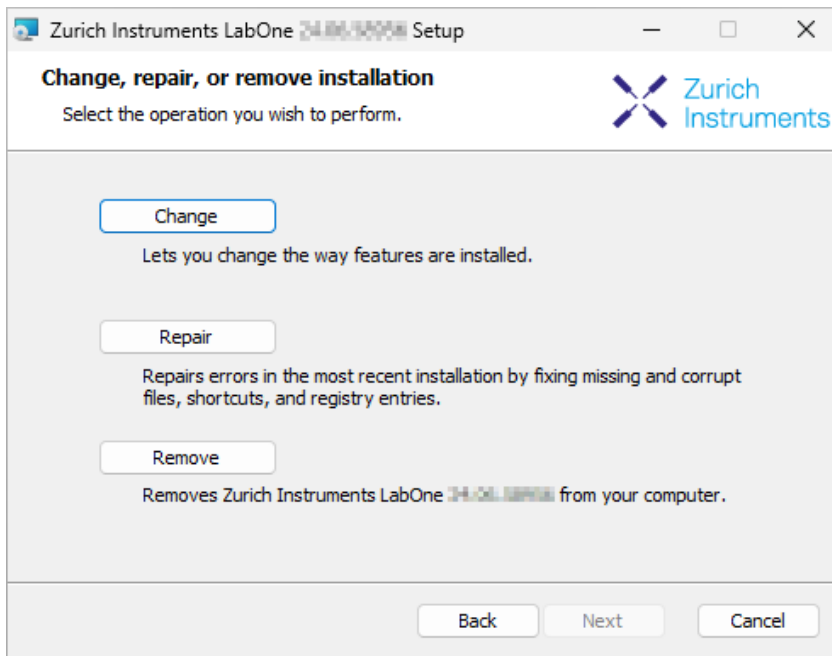



Figure 2.9: Repair of LabOne on Windows computers

After finishing the repair process, the normal uninstallation process described above can be triggered to uninstall LabOne.


### 2.4.4. Installing LabOne on macOS

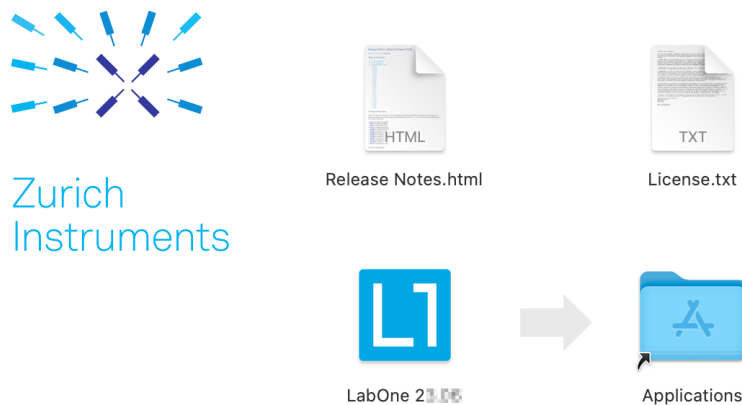LabOne supports both Intel and ARM (M-series) architectures within a single universal disk image (DMG) file available in our Download Center.

- Download and double-click the DMG file to mount the image.



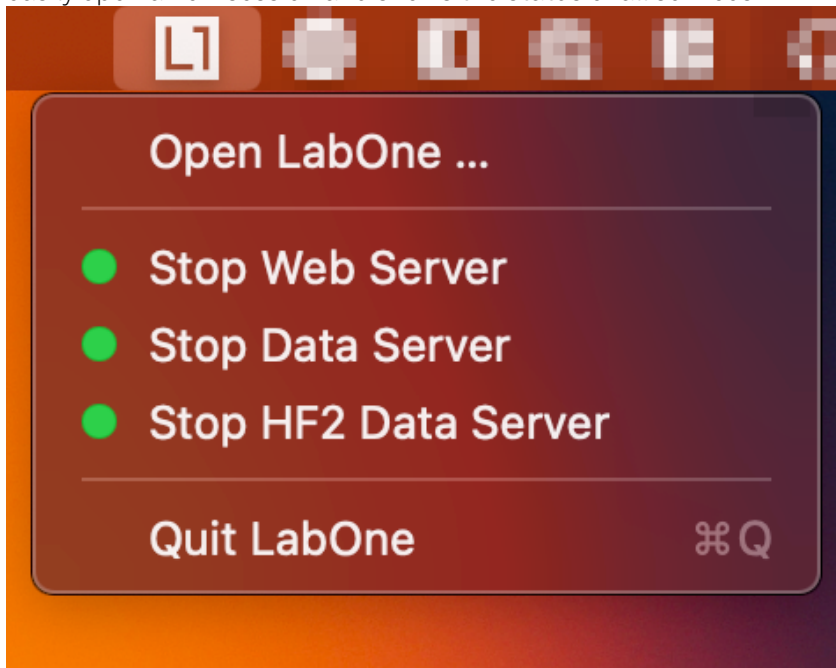- The image contains a single LabOne application with all services needed.
- Once the application is started, a labone icon will appear in the menu bar. It allows the user to easily open a new session and shows the status of all services.



### 2.4.5. Uninstalling LabOne on macOS

To uninstall LabOne on macOS, simply drag the LabOne application to the trash bin.

### 2.4.6. Application Content

The LabOne application contains all resources available for macOS. This includes:

- The binaries for the Web Server and Data Servers.
- The binaries for the C, MATLAB, and LabVIEW APIs.
- An offline version of the user manuals.
- The latest firmware images for all instruments.

To access this content, right-click on the LabOne application and select "Show Package Contents". Then, go into Contents/Resources.

## Note

Since the application name contains a space, one needs to escape it when using the command line to access the contents: `cd /Applications/LabOne\ XX.XX.app/Contents/Resources`

### 2.4.7. Start LabOne Manually on the Command Line

To start the LabOne services like the data server and web server manually, one can use the command line.

The data server binary is called `ziDataServer` (`ziServer` for HF2 instruments) and is located at `Applications/LabOne\ XX.XX.app/Contents/Resources/DataServer/`.

The web server binary is called `ziWebServer` and is located at `Applications/LabOne\ XX.XX.app/Contents/Resources/DataServer/`.

## Note

No special command line arguments are needed to start the LabOne services. Use the `--help` argument to see all available options.

### 2.4.8. Installing LabOne on Linux

### 2.4.9. Requirements

Ensure that the following requirements are fulfilled before trying to install the LabOne software package:

1. LabOne software supports typical modern GNU/Linux distributions (Ubuntu 14.04+, CentOS 7+, Debian 8+). The minimum requirements are glibc 2.17+ and kernel 3.10+.
2. You have administrator rights for the system.
3. The correct version of the LabOne installation package for your operating system and platform have been downloaded from the Zurich Instruments [Download Center](#):

```
LabOneLinux<arch>-<release>.<revision>.tar.gz,
```

Please ensure you download the correct architecture (x86-64 or arm64) of the LabOne installer. The `uname` command can be used in order to determine which architecture you are using, by running:

```
uname -m
```

in a command line terminal. If the command outputs `x86_64` the x86-64 version of the LabOne package is required, if it displays `aarch64` the ARM64 version is required.

### 2.4.10. Linux LabOne Installation

Proceed with the installation in a command line shell as follows:

1. Extract the LabOne tarball in a temporary directory:

```
tar xzvf LabOneLinux<arch>-<release>-<revision>.tar.gz
```

2. Navigate into the extracted directory.

```
cd LabOneLinux<arch>-<release>-<revision>
```

3. Run the install script with administrator rights and proceed through the guided installation, using the default installation path if possible:

```
sudo bash install.sh
```

The install script lets you choose between the following three modes:



## 2.5. Connecting to the Instrument

- Type "a" to install the Data Server program, the Web Server program, documentation and APIs.
  - ─ Type "u" to install **udev** support (only necessary if HF2 Instruments will be used with this LabOne installation and not relevant for other instrument classes).
  - ─ Type "ENTER" to install both options "a" and "u".
4. Test your installation by running the software as described in the next section.

### 2.4.11. Running the Software on Linux

The following steps describe how to start the LabOne software in order to access and use your instrument in the User Interface.

1. Start the Web Server program at a command prompt:

```
$ ziWebServer
```

2. Start an up-to-date web browser and enter the **127.0.0.1:8006** in the browser's address bar to access the Web Server program and start the LabOne User Interface. The LabOne Web Server installed on the PC listens by default on port number 8006 instead of 80 to minimize the probability of conflicts.
3. You can now start the LabOne User Interface as described in [LabOne Software Start-up](#) and choose an instrument to connect to via the Device Connection dialog shown in [Device Connection dialog](#).

### Important

Do not use two Data Server instances running in parallel; only one instance may run at a time.

### 2.4.12. Uninstalling LabOne on Linux

The LabOne software package copies an uninstall script to the base installation path (the default installation directory is `/opt/zi/`). To uninstall the LabOne package please perform the following steps in a command line shell:

1. Navigate to the path where LabOne is installed, for example, if LabOne is installed in the default installation path:

```
$ cd /opt/zi/
```

2. Run the uninstall script with administrator rights and proceed through the guided steps:

```
$ sudo bash uninstall_LabOne<arch>-<release>-<revision>.sh
```

## 2.5. Connecting to the Instrument

The Zurich Instruments QHub is operated using the LabOneQ and LabOne software. After installation of LabOne, the instrument can be connected to a computer by using the Ethernet cable supplied with the instrument. The Universal Serial Bus (USB) is not supported and is meant only for instrument maintenance.

The instrument can be physically integrated into an existing local area network (LAN) by connecting the instrument to a switch in the LAN using an Ethernet cable. The instrument can then be accessed from a web browser running on any computer in the same LAN with LabOne installed. The Ethernet connection can also be point-to-point. This requires some adjustment of the network card settings of the host computer. Depending on the network configuration and the installed network card, one or the other connection scheme is better suited.

### 2.5.1. LabOne Software Architecture

The Zurich Instruments LabOne software gives quick and easy access to the instrument from a host PC. LabOne also supports advanced configurations with simultaneous access by multiple software clients (i.e., LabOne User Interface clients and/or API clients), and even simultaneous access by several users working on different computers. Here we give a brief overview of the architecture of the LabOne software. This will help to better understand the following chapters.

## 2.5. Connecting to the Instrument

The software of Zurich Instruments equipment is server-based. The servers and other software components are organized in layers as shown in [Figure 2.10](#).

- The lowest layer running on the PC is the LabOne Data Server, which is the interface to the connected instrument.
- The middle layer contains the LabOne Web Server, which is the server for the browser-based LabOne User Interface.
- The graphical user interface, together with the programming user interfaces, are contained in the top layer.

The architecture with one central Data Server allows multiple clients to access a device with synchronized settings. The following sections explain the different layers and their functionality in more detail.

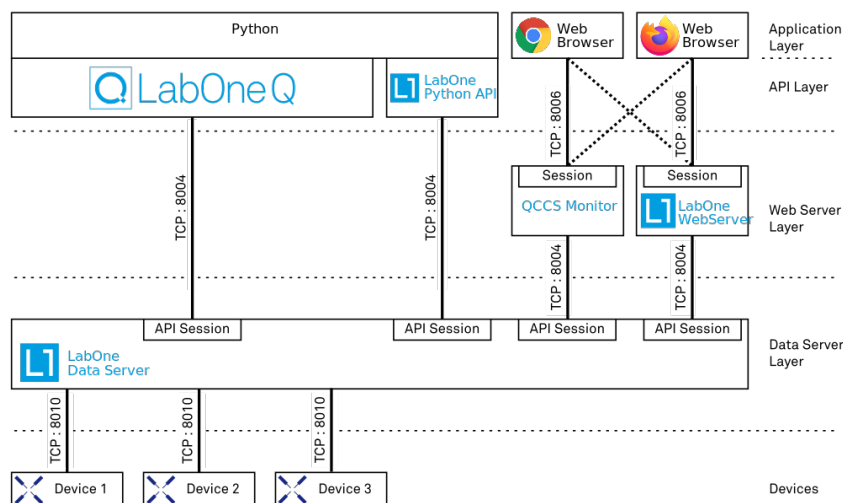


Figure 2.10: LabOne Software architecture

## LabOne Data Server

The **LabOne Data Server** program is a dedicated server that is in charge of all communication to and from the device. The Data Server can control a single or also multiple instruments. It will distribute the measurement data from the instrument to all the clients that subscribe to it. It also ensures that settings changed by one client are communicated to other clients. The device settings are therefore synchronized on all clients. On a PC, only a single instance of a LabOne Data Server should be running.

## LabOne Web Server

The LabOne Web Server is an application dedicated to serving up the web pages that constitute the LabOne user interface. The user interface can be opened with any device with a web browser. Since it is touch enabled, it is possible to work with the LabOne User Interface on a mobile device - like a tablet. The LabOne Web Server supports multiple clients simultaneously. This means that more than one session can be used to view data and to manipulate the instrument. A session could be running in a browser on the PC on which the LabOne software is installed. It could equally well be running in a browser on a remote machine.

With a LabOne Web Server running and accessing an instrument, a new session can be opened by typing in a network address and port number in a browser address bar. In case the Web Server runs on the **same** computer, the address is the localhost address (both are equivalent):

- `127.0.0.1:8006`
- `localhost:8006`

In case the Web Server runs on a **remote** computer, the address is the IP address or network name of the remote computer:

- `192.168.x.y:8006`
- `myPC.company.com:8006`

## 2.5. Connecting to the Instrument

The most recent versions of the most popular browsers are supported: Chrome, Firefox, Edge, Safari and Opera.

## LabOne API Layer

The instrument can also be controlled via the application program interfaces (APIs) provided by Zurich Instruments. APIs are provided in the form of DLLs for the following programming environments:

- MATLAB
- Python
- LabVIEW
- .NET
- C

The instrument can therefore be controlled by an external program, and the resulting data can be processed there. The device can be concurrently accessed via one or more of the APIs and via the user interface. This enables easy integration into larger laboratory setups. See the LabOne Programming Manual for further information. Using the APIs, the user has access to the same functionality that is available in the LabOne User Interface.

### 2.5.2. LabOne Software Start-up

This section describes the start-up of the LabOne User Interface which is used to control the QHub Instrument. If the LabOne software is not yet installed on the PC please follow the instructions in [Software Installation](#). If the device is not yet connected please find more information in [Visibility and Connection](#).

The LabOne User Interface start-up link can be found under the Windows 10/11 Start Menu. As shown in [Figure 2.11](#), click on **Start Menu → Zurich Instruments LabOne**. This will open the User Interface in a new tab in your default web browser and start the LabOne Data Server and LabOne Web Server programs in the background. A detailed description of the software architecture is found in [LabOne Software Architecture](#).

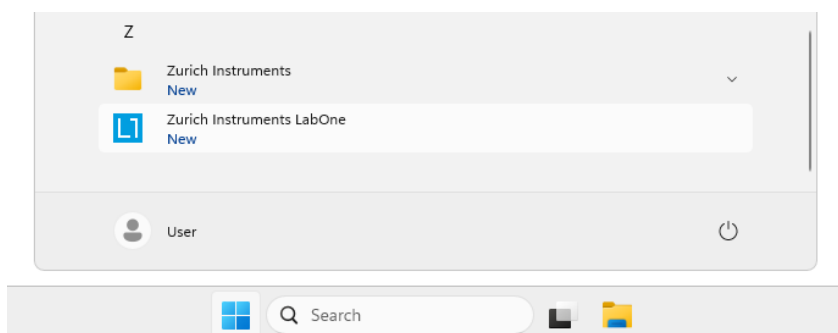


Figure 2.11: Link to the LabOne User Interface in the Windows 11 Start Menu

LabOne is an HTML5 browser-based program. This simply means that the user interface runs in a web browser and that a connection using a mobile device is also possible; simply specify the IP address (and port 8006) of the PC running the user interface.

## Note

By creating a shortcut to Google Chrome on your desktop with the Target `path\to\chrome.exe -app=http://127.0.0.1:8006` set in Properties you can run the LabOne User Interface in Chrome in application mode, which improves the user experience by removing the unnecessary browser controls.

After starting LabOne, the Device Connection dialog [Figure 2.12](#) is shown to select the device for the session. The term "session" is used for an active connection between the user interface and the device. Such a session is defined by device settings and user interface settings. Several sessions can be started in parallel. The sessions run on a shared LabOne Web Server. A detailed description of the software architecture can be found in the [LabOne Software Architecture](#).

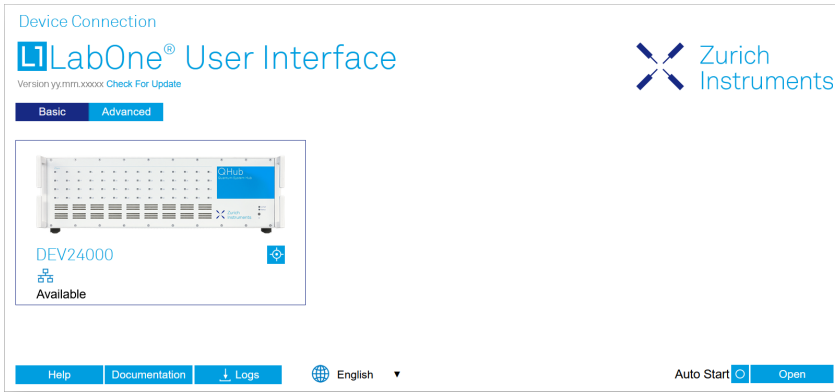


Figure 2.12: Device Connection dialog

The Device Connection dialog opens in the Basic view by default. In this view, all devices that are available for connection are represented by an icon with serial number and status information. If required, a button appears on the icon to perform a firmware upgrade. Otherwise, the device can be connected by a double click on the icon, or a click on the **Open** button at the bottom right of the dialog.

In some cases it's useful to switch to the Advanced view of the Device Connection dialog by clicking on the "Advanced" button. The Advanced view offers the possibility to select custom device and UI settings for the new session and gives further connectivity options that are particularly useful for multi-instrument setups.

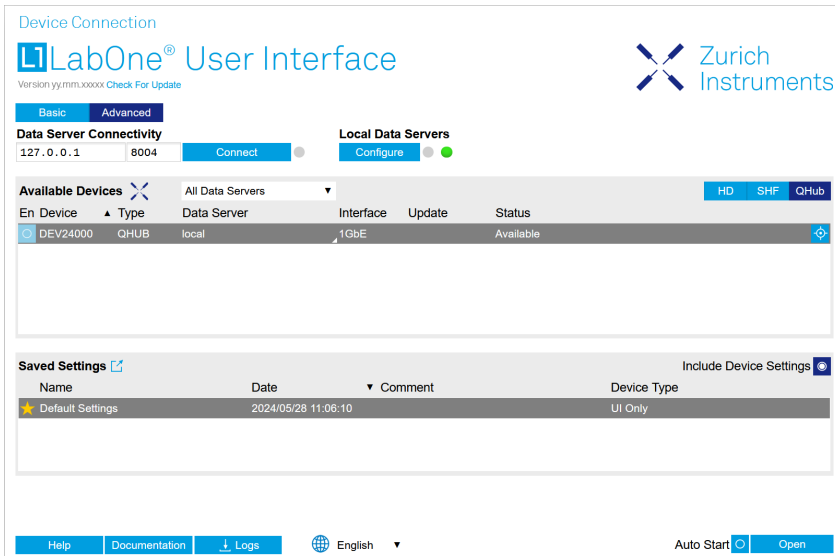


Figure 2.13: Device Connection dialog (Advanced view)

The Advanced view consists of three parts:

- Data Server Connectivity
- Available Devices
- Saved Settings

The Available Devices table has a display filter, usually set to **Default Data Server**, that is accessible by a drop-down menu in the header row of the table. When changing this to **Local Data Servers**, the Available Devices table will show only connections via the Data Server on the host PC and will contain all instruments connected to the local network. When using the **All Data Servers** filter, connections via Data Servers running on other PCs in the network also become accessible. Once your instrument appears in the Available Devices table, perform the following steps to start a new session:

1. Select an instrument in the **Available Devices** table.
2. Select a setting file in the **Saved Settings** list unless you would like to use the Default Settings.
3. Start the session by clicking on **Open**

## Note

By default, opening a new session will only load the UI settings (such as plot ranges), but not the device settings (such as signal amplitude) from the saved settings file. In order to include the device settings, enable the **Include Device Settings** checkbox. Note that this can affect existing sessions since the device settings are shared between them.

## Note

In case devices from other Zurich Instruments series are used in parallel, the list in **Available Devices** section can contain those as well.

The following sections describe the functionality of the **Device Connection** dialog in detail.

## Data Server Connectivity

The Device Connection dialog represents a Web Server. However, on start-up the Web Server is not yet connected to a LabOne Data Server. With the **Connect/Disconnect** button the connection to a Data Server can be opened and closed.

This functionality can usually be ignored when working with a single QHub Instrument and a single host computer. Data Server Connectivity is important for users operating their instruments from a remote PC, i.e., from a PC different to the PC on which the Data Server is running or for users working with multiple instruments. The Data Server Connectivity function then gives the freedom to connect the Web Server to one of several accessible Data Servers. This includes Data Servers running on remote computers, and also Data Servers running on an MF Series instrument.

In order to work with a Zurich Instrument device remotely, proceed as follows. On the computer directly connected to the instrument (Computer 1) open a User Interface session and change the Connectivity setting in the Config tab to "From Everywhere". On the remote computer (Computer 2), open the Device Connection dialog by starting up the LabOne User Interface and then go to the Advanced view by clicking on **Advanced** on the top left of the dialog. Change the display filter from Default Data Server to All Data Servers by opening the drop-down menu in the header row of the Available Devices table. This will make the Instrument connected to Computer 1 visible in the list. Select the device and connect to the remote Data Server by clicking on **Connect**. Then start the User Interface as described above.

## Note

When using the filter "All Data Servers", take great care to connect to the right instrument, especially in larger local networks. Always identify your instrument based on its serial number in the form DEV0000, which can be found on the instrument back panel.

## Available Devices

The Available Devices table gives an overview of the visible devices. A device is ready for use if either marked free or connected. The first column of the list holds the **Enable** button controlling the connection between the device and a Data Server. This button is greyed out until a Data Server is connected to the LabOne Web Server using the **Connect** button. If a device is connected to a Data Server, no other Data Server running on another PC can access this device.

The second column indicates the serial number and the third column shows the instrument type. The fourth column shows the host name of the LabOne Data Server controlling the device. The next column shows the interface type. For QHub Instruments the interface 1GbE is available and listed if physically connected. The LabOne Data Server will scan for the available devices and interfaces every second. If a device has just been switched on or physically connected it may take up to 20 s before it becomes visible to the LabOne Data Server.

If a firmware update of the instrument is available, the second to last column will show a button, and a simple click on it will update the instrument. The last column indicates the status of the device. [Table 2.5](#) explains the meaning of some of the possible device statuses.

Table 2.5: Device Status Information


Connected	The device is connected to a LabOne Data Server, either on the same PC (indicated as local) or on a remote PC (indicated by its IP address). The user can start a session to work with that device.
Free	The device is not in use by any LabOne Data Server and can be connected by clicking the <b>Open</b> button.
In Use	The device is in use by a LabOne Data Server. As a consequence the device cannot be accessed by the specified interface. To access the device, a disconnect is needed.
Device FW upgrade required/available	The firmware of the device is out of date. Please first upgrade the firmware as described in <a href="#">Software Update</a> .
Device not yet ready	The device is visible and starting up.

## Saved Settings

Settings files can contain both UI and device settings. UI settings control the structure of the LabOne User Interface, e.g. the position and ordering of opened tabs. Device settings specify the set-up of a device. The device settings persist on the device until the next power cycle or until overwritten by loading another settings file.

The columns are described in [Table 2.6](#). The table rows can be sorted by clicking on the column header that should be sorted. The default sorting is by time. Therefore, the most recent settings are found on top. Sorting by the favorite marker or setting file name may be useful as well.

Table 2.6: Column Descriptions

	Allows favorite settings files to be grouped together. By activating the stars adjacent to a settings file and clicking on the column heading, the chosen files will be grouped together at the top or bottom of the list accordingly. The favorite marker is saved to the settings file. When the LabOne user interface is started next time, the row will be marked as favorite again.
Name	The name of the settings file. In the file system, the file name has the extension .md.
Date	The date and time the settings file was last written.
Comment	Allows a comment to be stored in the settings file. By clicking on the comment field a text can be typed which is subsequently stored in the settings file. This comment is useful to describe the specific conditions of a measurement.
Device Type	The instrument type with which this settings file was saved.

## Special Settings Files

Certain file names have the prefix "last\_session\_". Such files are created automatically by the LabOne Web Server when a session is terminated either explicitly by the user, or under critical error conditions, and save the current UI and device settings. The prefix is prepended to the name of the most recently used settings file. This allows any unsaved changes to be recovered upon starting a new session.

If a user loads such a last session settings file the "last\_session\_" prefix will be cut away from the file name. Otherwise, there is a risk that an auto-save will overwrite a setting which was saved explicitly by the user.

The settings file with the name "Default Settings" contains the default UI settings. See button description in [Table 2.7](#).

Table 2.7: Button Descriptions

<b>Open</b>	The settings contained in the selected settings file will be loaded. The button "Include Device Settings" controls whether only UI settings are loaded, or if device settings are included.
-------------	---

<b>Include Device Settings</b>	Controls which part of the selected settings file is loaded upon clicking on Open. If enabled, both the device and the UI settings are loaded.
<b>Auto Start</b>	Skips the session dialog at start-up if selected device is available. The default UI settings will be loaded with unchanged device settings.

## Note

The user setting files are saved to an application-specific folder in the directory structure. The best way to manage these files is using the File Manager tab in the LabOne UI.

## Note

The factory default UI settings can be customized by saving a file with the name "default\_ui" in the Config tab once the LabOne session has been started and the desired UI setup has been established. To use factory defaults again, the "default\_ui" file must be removed from the user setting directory using the File Manager tab.

## Note

Double clicking on a device row in the Available Devices table is a quick way of starting the default LabOne UI. This action is equivalent to selecting the desired device and clicking the **Open** button.

Double clicking on a row in the Saved Settings table is a quick way of loading the LabOne UI with those UI settings and, depending on the "Include Device Settings" checkbox, device settings. This action is equivalent to selecting the desired settings file and clicking the **Open** button.

## Tray Icon

When LabOne is started, a tray icon appears by default in the bottom right corner of the screen, as shown in the figure below. By right-clicking on the icon, a new web server session can be opened quickly, or the LabOne Web and Data Servers can be stopped by clicking on Exit. Double-clicking the icon also opens a new web server session, which is useful when setting up a connection to multiple instruments, for example.



## Messages

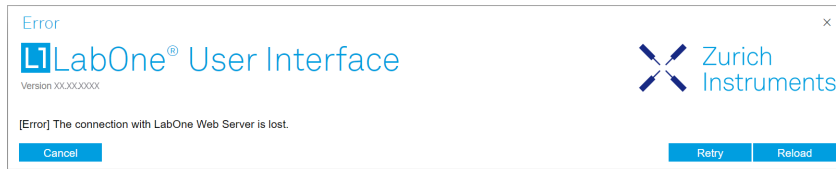
The LabOne Web Server will show additional messages in case of a missing component or a failure condition. These messages display information about the failure condition. The following paragraphs list these messages and give more information on the user actions needed to resolve the problem.

## Lost Connection to the LabOne Web Server

In this case the browser is no longer able to connect to the LabOne Web Server. This can happen if the Web Server and Data Server run on different PCs and a network connection is interrupted. As long as the Web Server is running and the session did not yet time out, it is possible to just attach to the existing session and continue. Thus, within about 15 seconds it is possible with **Retry** to recover


## 2.5. Connecting to the Instrument

the old session connection. The **Reload** button opens the Device Connection dialog shown in [Figure 2.12](#). The figure below shows an example of the Connection Lost dialog.




## Reloading...

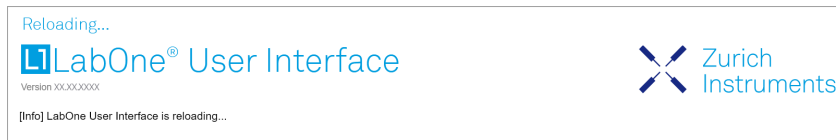If a session error cannot be handled, the LabOne Web Server will restart to show a new Device Connection dialog as shown in [Figure 2.12](#). During the restart a window is displayed indicating that the LabOne User Interface will reload. If reloading does not happen the same effect can be triggered by pressing F5 on the keyboard. The figure below shows an example of this dialog.



## No Device Discovered

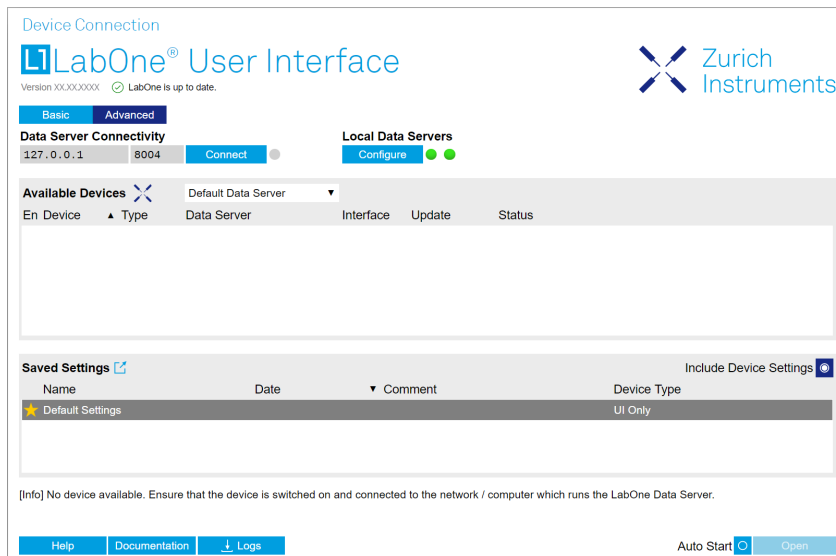An empty "Available Devices" table means that no devices were discovered. This can mean that no LabOne Data Server is running, or that it is running but failed to detect any devices. The device may be switched off or the interface connection fails. For more information on the interface between device and PC see [Visibility and Connection](#). The figure below shows an example of this dialog.



## No Device Available

If all the devices in the "Available Devices" table are shown grayed, this indicates that they are either in use by another Data Server, or need a firmware upgrade. For firmware upgrade see [Software Update](#). If all the devices are in use, access is not possible until a connection is relinquished by another Data Server.



### 2.5.3. Visibility and Connection

The instrument is connected to a host computer by 1 Gbit/s Ethernet (1GbE). The Ethernet connection can be a part of the local network (LAN) or in a dedicated sub-network. Depending on the network configuration and the installed network card, one or the other connectivity is better suited.

If an instrument is connected to a network, it can be accessed from multiple host computers. To manage the access to the instrument, there are two different connectivity states: visible and connected. It is important to distinguish if an instrument is just physically connected over Ethernet or actively controlled by the LabOne Data Server. In the first case the instrument is visible to the LabOne Data Server. In the second case the instrument is logically connected.

#### Visible Instruments

An instrument is visible if the Data Server can identify it. On a TCP/IP network, several PCs running a Data Server will detect the same instrument as visible, i.e., discover it. If a device is discovered, the LabOne Data Server can initiate a connection to access the instrument. Only a single Data Server can be connected to an instrument at a time.

#### Connected Instrument

Once connected to an instrument, the Data Server has exclusive access to that instrument. If another Data Server from another PC already has an active connection to the instrument, the instrument is still visible but cannot be connected.

Although a Data Server has exclusive access to a connected instrument, the Data Server can have multiple clients. Like this, multiple browser and API sessions can access the instrument simultaneously.

### 2.5.4. Ethernet Connectivity

To connect the instrument to the Ethernet interface, the instrument needs to get a valid IP address for the network that is connected to. There are three methods that can be used:

- Automatic assignment with DHCP
- Static Device IP
- Fallback Device IP

Automatic assignment with DHCP is the simplest and preferred connection method. Other connection methods can become necessary when using network configurations that conflict with local policies.

#### IP assignment methods

##### Automatic assignment with DHCP

The most straightforward TCP/IP connection method is to rely on a network configuration to recognize the instrument. When connecting the instrument to a local area network (LAN), the DHCP server will assign an IP address to the instrument like to any PC in the network. In case of restricted networks, the network administrator may be required to register the device on the network by means of the MAC address. The MAC address is indicated on the back panel of the instrument. The LabOne Data Server will detect the device in the network by means of a multicast.

If there is no DHCP server on the network, or if the host computer has other network cards installed, it is necessary to use a static IP setup as described below.

The instrument is configured to accept the IP address from the DHCP server, or to fall back to the local-link IP address if it does not get the address from the DHCP server.

## Static Device IP

Although it is recommended to use a dynamic IP assignment method in the host network of the instrument, there may be cases where the user wants to assign a static IP to the instrument. For instance, when the host network only contains Ethernet switches and hubs but no Ethernet routers are included, there is no DHCP server to dynamically assign an IP to the instrument.

Note that the static IP assigned to the instrument must be within the same range of the IP assigned to the host computer. Whether the host computer's IP is assigned statically or by a fallback mechanism, one can find this IP by running the command `ipconfig` or `ipconfig/all` in the operating system's terminal. As an example, [Figure 2.14](#) shows the outcome of running `ipconfig` in the terminal.

```
Ethernet adapter Ethernet 4:

Connection-specific DNS Suffix . . : 
Link-local IPv6 Address . . . . . : fe80::f3ad:19ae:ffd9:f8ef%17
Autoconfiguration IPv4 Address. . . : 169.254.16.57
Subnet Mask . . . . . : 255.255.0.0
Default Gateway . . . . . :
```

Figure 2.14: IP and subnet mask of host computer

It shows the network adapter of the host computer can be reached via the IP **169.254.16.57** and it uses a subnet mask of **255.255.0.0**. To make sure that the instrument is visible to this computer, one needs to assign a static IP of the form **169.254.x.x** and the same subnet mask to the instrument. To do so, the user should follow the instructions below.

1. Attach the instrument using an Ethernet cable to the network where the user's computer is hosted.
2. Switch on the instrument.
3. Open the LabOne user interface (UI) and connect to the instrument.
4. Open the "Device" tab of the LabOne UI and locate the "Communication" section as shown in [Configuration of static IP in LabOne UI](#).
5. Write down the desired static IP, e.g. **169.254.16.20**, into the numeric field "IPv4 Address".
6. Add the same subnet mask as the host computer, e.g. **255.255.0.0** to the numeric field "IPv4 Mask".
7. You can leave the field "Gateway" as **0.0.0.0** or change to be similar to the IP address but ending with **1**, e.g. **169.254.16.1**.
8. Enable the radio button for "Static IP".
9. Press the button "Program" to save the new settings to the instruments.
10. Power cycle the instrument. The instrument should be visible to LabOne via Ethernet connection.

**Communication**

**Current Configuration**

Interface	1GbE
MAC Address	80:2F:DE:00:00:00
IPv4 Address	169.254.1.1

**Network Configuration 1GbE**

Static IP

IPv4 Address	169.254.16.20
IPv4 Mask	255.255.0.0
Gateway	0.0.0.0

**Program**

Figure 2.15: Configuration of static IP in LabOne UI

To make sure the IP assignment is done properly, one can use the command `ping` to check if the instrument can be reached through the network using its IP address. Figure 2.16 shows the outcome of `ping` when the instrument is visible via the IP `169.254.16.20`.

```
C:\> ping 169.254.16.20

Pinging 169.254.16.20 with 32 bytes of data:
Reply from 169.254.16.20: bytes=32 time<1ms TTL=64
Reply from 169.254.16.20: bytes=32 time<1ms TTL=64
Reply from 169.254.16.20: bytes=32 time<1ms TTL=64
Reply from 169.254.16.20: bytes=32 time<1ms TTL=64

Ping statistics for 169.254.16.20:
    Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
    Approximate round trip times in milli-seconds:
        Minimum = 0ms, Maximum = 0ms, Average = 0ms
```

Figure 2.16: Instrument visible through pinging

If set properly according to the instructions above, the instrument will use the same static IP configurations after each power cycle.

## Fallback Device IP

When configured to a dynamic address, but no DHCP server is present in the network, e.g., device connected directly to a PC, the instrument falls back on an IP address in the local link IP range that is `169.254.x.x`. If the host computer has also an IP address within the same range, the instrument becomes visible to the LabOne data server running on the host computer. This way, there is no need to go through the process described above to assign a static IP to the instrument.

## Instrument discovery

Regardless of how the instrument gets its IP address, the LabOne software needs to know about the instrument and its address. This is done automatically by the LabOne discovery protocol. It uses multicast messages sent over all available Ethernet interfaces. When successful, no additional configuration is needed. If such messages are blocked, the automatic discovery might fail. That could happen if the network administrator has configured IGMP snooping to block or inadvertently interfere with multicast messages or with certain Ethernet routers. In this case, it is possible to manually specify the IP addresses of the instruments with the `--device-ip` argument of the data server. For example:

```
$ ziDataServer --device-ip "192.168.1.2,192.168.1.3"
```

will search for Zurich Instruments devices on IP 192.168.1.2 and 192.168.1.3 on all Ethernet interfaces.

## 2.6. Software Update

### 2.6.1. Overview

It is recommended to regularly update the LabOne software on the QHub Instrument to the latest version. In case the Instrument has access to the internet, this is a very simple task and can be done with a single click in the software itself, as shown in [Updating LabOne using Automatic Update Check](#). If you use one of the LabOne APIs with a separate installer, don't forget to update this part of the software, too.

### 2.6.2. Updating LabOne using Automatic Update Check

Updating the software is done in two steps. First, LabOne is updated on the PC by downloading and installing the LabOne software from the Zurich Instruments downloads page, as shown in [Software Installation](#). Second, the instrument firmware needs to be updated from the Device Connection dialog after starting up LabOne. This is shown in [Updating the Instrument Firmware](#). In case "Periodically check for updates" has been enabled during the LabOne installation and LabOne has access to the internet, a notification will appear on the Device Connection dialog whenever a new version of the software is available for download. This setting can later be changed in the Config tab of the LabOne user interface. In case automatic update check is disabled, the user can manually check for updates at any time by clicking on the button [Check For Update](#) in the Device Connection dialog. In case an update is found, clicking on the button "Update Available" shown in [Figure 2.17](#) will start a download of the latest LabOne installer for Windows or Linux, see [Figure 2.18](#). After download, proceed as explained in [Software Installation](#) to update LabOne.



Figure 2.17: Device Connection dialog: LabOne update available

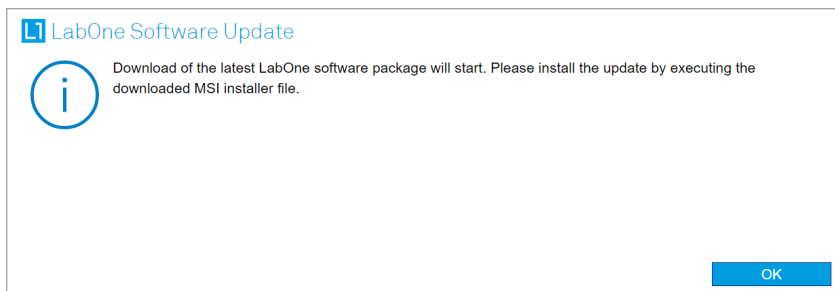


Figure 2.18: Download LabOne MSI using Automatic Update Check feature

### 2.6.3. Updating the Instrument Firmware

The LabOne software consists of both software that runs on your PC and software that runs on the instrument. In order to distinguish between the two, the latter will be called firmware for the rest of this document. When upgrading to a new software release, it's also necessary to update the instrument firmware.

If the firmware needs an update, this is indicated in the Device Connection dialog of the LabOne user interface under Windows.

In the Basic view of the dialog, there will be a button "Upgrade FW" appearing together with the instrument icon as shown in Figure 2.19. In the Advanced view, there will be a link "Upgrade FW" in the Update column of the Available Devices table. Click on **Upgrade FW** to open the firmware update start-up dialog shown in Figure 2.20. The firmware upgrade takes approximately 2 minutes.

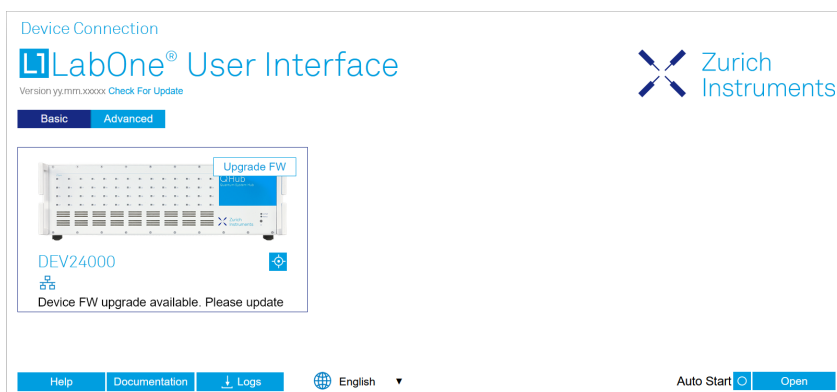


Figure 2.19: Device Connection dialog with available firmware update

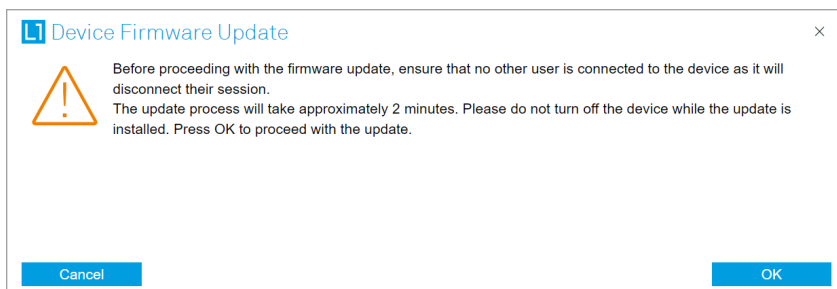


Figure 2.20: Device Firmware Update start-up dialog

## Important

Do not disconnect the USB or 1GbE cable to the Instrument or power-cycle the Instrument during a firmware update.

If you encounter any issues while upgrading the instrument firmware, please contact Zurich Instruments at [support@zhinst.com](mailto:support@zhinst.com).

## 2.7. Troubleshooting

This section aims to help the user solve and avoid problems while using the software and operating the instrument.

### 2.7.1. Common Problems

Your QHub Instrument is an advanced piece of laboratory equipment which has many features and capabilities. In order to benefit from these, the user needs access to a large number of settings in the API or the LabOne User Interface. The complexity of the settings might overwhelm a first-time user, and even expert users can get surprised by certain combinations of settings. This section provides an easy-to-follow checklist to solve the most common mishaps.

Table 2.8: Common Problems

Problem	Check item
The software cannot be installed or uninstalled	Please verify you have administrator/root rights.
The software cannot be updated	Please use the Modify option in Windows Apps & Features functionality. In the software installer select Repair, then uninstall the old software version, and install the new version.
The Instrument does not turn on	Please verify the power supply connection.
The LabOne User Interface does not start	Verify that the LabOne Data Server ( <b>ziDataServer.exe</b> ) and the LabOne Web Server ( <b>ziWebServer.exe</b> ) are running via the Windows Task Manager. The Data Server should be started automatically by <b>ziService.exe</b> and the Web Server should be started upon clicking "Zurich Instruments LabOne" in the Windows Start Menu. If both are running, but clicking the Start Menu does not open a new User Interface session in a new tab of your default browser then try to create a new session manually by entering <b>127.0.0.1:8006</b> in the address bar of your browser.
The user interface does not start or starts but remains idle	Verify that the Data Server has been started and is running on your host computer.
The user interface is slow and the web browser process consumes a lot of CPU power	Make sure that the hardware acceleration is enabled for the web browser that is used for LabOne. For the Windows operating system, the hardware acceleration can be enabled in <b>Control Panel → Display → Screen Resolution</b> . Go to Advanced Settings and then Trouble Shoot. In case you use a NVIDIA graphics card, you have to use the NVIDIA control panel. Go to Manage 3D Settings, then Program Settings and select the program that you want to customize.

## 2.7.2. Location of the Log Files

The most recent log files of the LabOne Web and Data Server programs are most easily accessed by clicking on **Logs** in the **LabOne Device Connection dialog** of the user interface. The Device Connection dialog opens on software start-up or upon clicking on **Session Manager** in the Config tab of the user interface.

The location of the Web and Data Server log files on disk are given in the sections below.

## Windows

The Web and Data Server log files on Windows can be found in the following directories.

- LabOne Data Server (**ziDataServer.exe**):  
C:\Windows\ServiceProfiles\LocalService\AppData\Local\Temp\Zurich Instruments\LabOne\ziDataServerLog
- LabOne Web Server (**ziWebServer.exe**):  
C:\Users\[USER]\AppData\Local\Temp\Zurich Instruments\LabOne\ziWebServerLog

## Note

The `C:\Users\[USER]\AppData` folder is hidden by default under Windows. A quick way of accessing it is to enter `%AppData%\..` in the address bar of the Windows File Explorer.

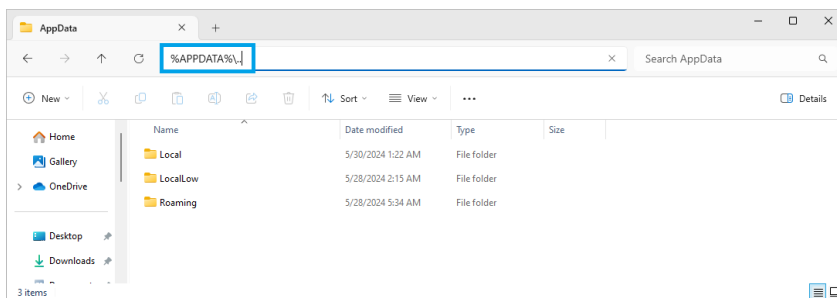


Figure 2.21: Using the

## Linux and macOS

The Web and Data Server log files on Linux or macOS can be found in the following directories.

- LabOne Data Server (`ziDataServer`):  
/tmp/ziDataServerLog\_[USER]
- LabOne Web Server (`ziWebServer`):  
/tmp/ziWebServerLog\_[USER]

### 2.7.3. Prevent web browsers from sleep mode

It often occurs that an experiment requires a long-time signal acquisition; therefore, the setup including the measurement instrument and LabOne software are left unattended. By default, many web browsers go to a sleep mode after a certain idle time which results in the loss of acquired data when using the web-based user interface of LabOne for measurement. Although it is recommended to take advantage of LabOne APIs in these situations to automate the measurement process and avoid using web browsers for data recording, it is still possible to adjust the browser settings to prevent it from entering the sleep mode. Below, you will find how to modify the settings of your preferred browser to ensure a long-run data acquisition can be implemented properly.

## Edge

1. Open **Settings** by typing `edge://settings` in the address bar
2. Select **System** from the icon bar.
3. Find the **Never put these sites to sleep** section of the **Optimized Performance** tab.
4. Add the IP address and the port of LabOne Webserver, e.g., `127.0.0.1:8006` or `192.168.73.98:80` to the list.

## Chrome

1. While LabOne is running, open a tab in Chrome and type `chrome://discards` in the address bar.
2. In the shown table listing all the open tabs, find LabOne and disable its **Auto Discardable** feature.
3. This option avoids discarding and refreshing the LabOne tab as long as it is open. To disable this feature permanently, you can use an extension from the Chrome Webstore.

## Firefox

1. Open **Advanced Preferences** by typing `about:config` in the address bar.
2. Look for `browser.tabs.unloadOnLowMemory` in the search bar.
3. Change it to **false** if it is **true**.

## Opera

1. Open **Settings** by typing `opera://settings` in the address bar.
2. Locate the **User Interface** section in the **Advanced** view.
3. Disable the **Snooze inactive tabs to save memory** option and restart Opera.

## Safari

1. Open **Debug** menu.
2. Go to **Miscellaneous Flags**.
3. Disable **Hidden Page Timer Throttling**.



# 3. Functional Overview

This chapter provides the overview of the features provided by the QHub Instrument. The first section contains the description of the graphical overview and the hardware and software feature list. The next section details the front panel and the back panel of the instrument. The last section provides product selection and ordering support.

## 3.1. Features

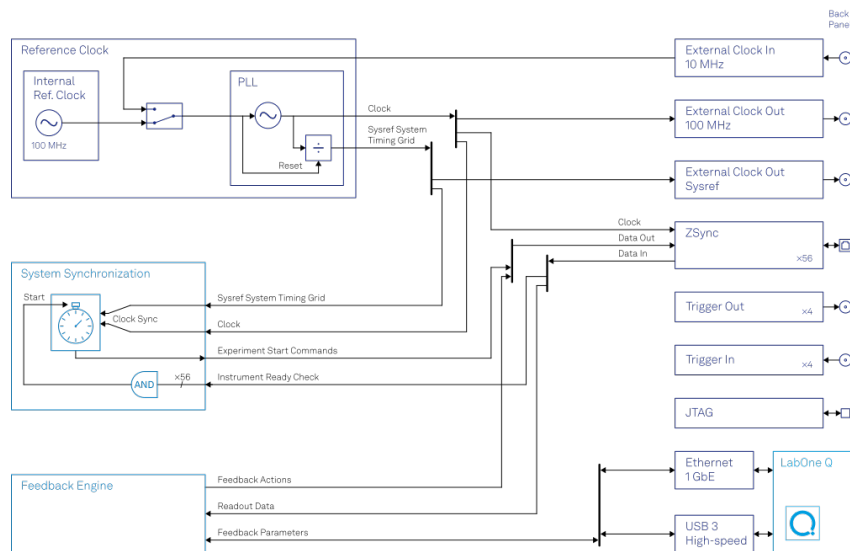


Figure 3.1: QHub instrument functional diagram

The QHub Instrument according to [Figure 3.1](#) consists of several internal units (light blue color) surrounded by several interface units (dark blue color) and the back panel on the right-hand side. The orange blocks are optional units that can be either ordered at the beginning or upgraded later. The arrows between the panels and the interface units indicate selected physical connections and the data flow.

The Zurich Instruments QHub enables scalable quantum processor control through automated synchronization and low-latency communication between all components of a Quantum Computing Control System (QCCS). It provides high-level software access to powerful real-time capabilities designed for the most pervasive use cases in quantum computing.

With 56 ZSync ports, the QHub supports systems with up to 448 microwave control, readout, or flux control channels for precisely timed and stable gate and readout operations. Central data processing enables feedback methods that require global information of the system state, e.g. for quantum error correction. Including all signal processing, the feedback latency is below 550 ns between any connected instruments.

Decoding algorithms can be efficiently implemented on a powerful FPGA core using a ready processing infrastructure accessible in Python. Optional direct programming of the FPGA provides the flexibility required in developing novel decoder algorithms.

### Software Features

- LabOneQ Python framework for high-level multi-instrument control and experiment definition and execution
- Web-based, high-speed user interface for multi-instrument control and monitoring

## 3.2. Front Panel Tour

The front panel Control LEDs are arranged as shown in [Figure 3.2](#) and listed in [Table 3.1](#).


### 3.2. Front Panel Tour



Figure 3.2: QHub Quantum System Hub instrument front panel

Table 3.1: QHub Instrument front panel description

Position	Label / Name	Description
A	ZSync	56 ZSync port synchronization LEDs. Shows the status of the corresponding ZSync port link off No instrument has been detected. white An instrument has been detected, but no connection is established yet blue Link with the instrument is established yellow Busy, establishing a connection red Error, connection not successfully established. The error can be clock, receiver or transmitter related
B	-	Air inlet (important: keep clear from obstruction)
C	multicolor LEDs	off Instrument off or uninitialized blink all LEDs blink for 5 seconds → indicator used by the Identify Device functionality
	Ext Ref	off External Reference Signal not present/detected blue External Reference Signal is present and locked on to yellow External Reference Signal present, but not locked on to red External Reference Signal present, but lock failed
	Status	off Instrument off or uninitialized blue Instrument is initialized and has no warnings or errors yellow Instrument has warnings red Instrument has errors

Position	Label / Name	Description
D	 Soft power button	Power button with incorporated status LED off Instrument off and disconnected from mains power blue <ul style="list-style-type: none"> <li>■ <b>flashing rapidly (&gt;1/sec):</b> Firmware is starting</li> <li>■ <b>flashing slow (&lt;1/sec):</b> Firmware ready, waiting for connection</li> <li>■ <b>constant:</b> Instrument ready and active connection over USB or Ethernet</li> </ul> red <ul style="list-style-type: none"> <li>■ <b>breathing:</b> Instrument off but connected to mains power → safe to power off using the rear panel switch, or restart using the soft power button</li> <li>■ <b>flashing:</b> Instrument booting up</li> <li>■ <b>constant:</b> Fatal error occurred</li> </ul>

### 3.3. Back Panel Tour

The back panel is the main interface for power, control, service and connectivity to other ZI instruments. Please refer to [Figure 3.3](#) and [Table 3.2](#) for the detailed description of the items.

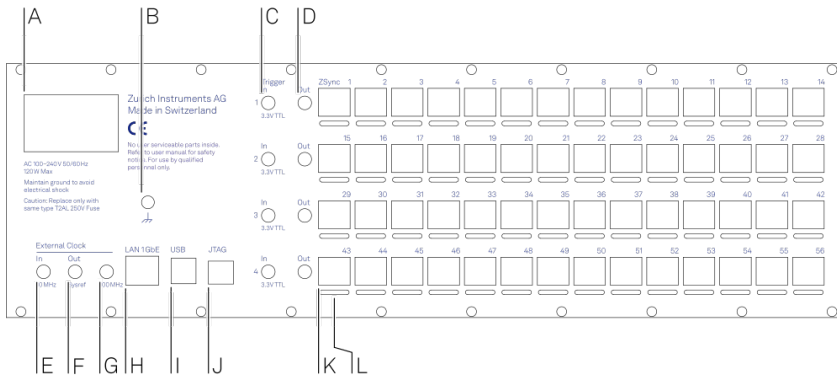



Figure 3.3: QHub Quantum System Hub instrument back panel

Table 3.2: QHub Instrument back panel description

Position	Label / Name	Description
A	AC 100 - 240 V	Power inlet, fuse holder, and power switch
B	 Earth ground	4 mm banana jack connector for earth ground, electrically connected to the chassis and the earth pin of the power inlet
C	Trigger In	Digital trigger input
D	Trigger Out	Digital trigger output
E	External Clock In 10 MHz	External Reference Clock Input (10 MHz) for synchronization with other instruments
F	External Clock Out Sysref	External Reference Clock Input (Slow reference, sysref) for synchronization with other instruments
G	External Clock Out 100 MHz	External Reference Clock Input (100 MHz) for synchronization with other instruments
H	LAN 1 GbE	1 Gbit LAN connector for connection to the host computer
I	USB	Universal Serial Bus (USB) 3.0 port connector. Only for maintenance operations.
J	JTAG	Connector for programming and debugging the FPGA
K	ZSync	Inter-instrument synchronization and real-time feedback connector - attention: this is not an Ethernet plug, connection to an Ethernet network might damage the instrument.

Position	Label / Name	Description
L	-	Air outlet (important: keep clear from obstruction)

## 3.4. Ordering Guide

Table 3.3 provides an overview of the available QHub products and options. Upgradeable features are options that can be purchased anytime without the need to send the Instrument back to Zurich Instruments.

Table 3.3: QHub Instrument product codes for ordering

Product code	Product name	Description	Field upgrade possible
QHUB56	QHub56 Quantum System Hub	Base instrument with 56 ZSync ports	-

# 4. Functional Description LabOne User Interface

This chapter gives a detailed description of the functionality available in the LabOne User Interface (UI) for the Zurich Instruments QHub. LabOne provides a data server and a web server to control the Instrument with any of the most common web browsers (e.g. Firefox, Chrome, Edge, etc.). This platform-independent architecture supports interaction with the Instrument using various devices (PCs, tablets, smartphones, etc.) even at the same time if needed.

## 4.1. User Interface Overview

### 4.1.1. UI Nomenclature

This section provides an overview of the LabOne User Interface, its main elements and naming conventions. The LabOne User Interface is a browser-based UI provided as the primary interface to the QHub instrument. Multiple browser sessions can access the instrument simultaneously and the user can have displays on multiple computer screens. Parallel to the UI, the instrument can be controlled and read out by custom programs written in any of the supported languages (e.g. LabVIEW, MATLAB, Python, C) connecting through the LabOne APIs.

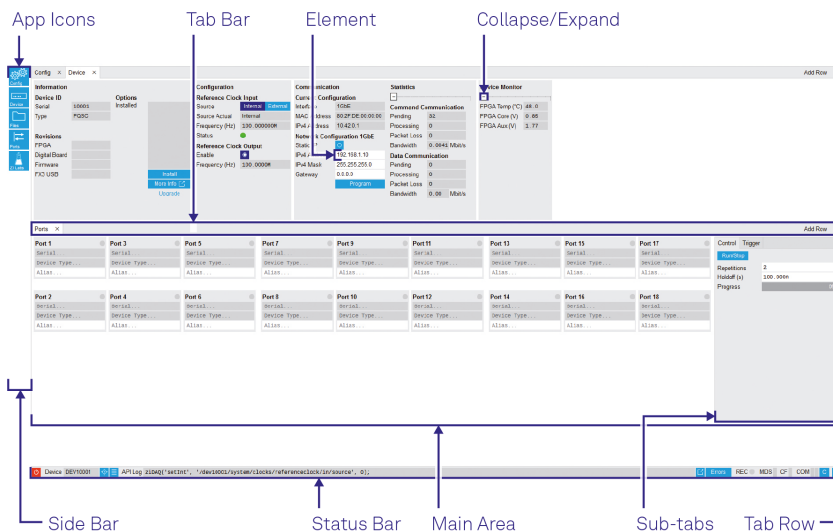


Figure 4.1: LabOne User Interface (default view)

The LabOne User Interface automatically opens some tabs by default after a new UI session has been started. At start-up, the UI is divided into two tab rows, each containing a tab structure that gives access to the different LabOne tools. Depending on display size and application, tab rows can be freely added and deleted with the control elements on the right-hand side of each tab bar. Similarly, the individual tabs can be deleted or added by selecting app icons from the side bar on the left. A click on an icon adds the corresponding tab to the display, alternatively the icon can be dragged and dropped into one of the tab rows. Moreover, tabs can be moved by drag-and-drop within a row or across rows.

Table 4.1 gives a brief descriptions and naming conventions for the most important UI items.

Table 4.1: LabOne User Interface features

Item name	Position	Description	Contains
side bar	left-hand side of the UI	contains app icons for each of the available tabs - a click on an icon adds or activates the corresponding tab in the active tab row	app icons

Item name	Position	Description	Contains
status bar	bottom of the UI	contains important status and warning indicators, device and session information, and access to the command log	status indicators
main area	center of the UI	accommodates all active tabs – new rows can be added and removed by using the control elements in the top right corner of each tab row	tab rows, each consisting of tab bar and the active tab area
tab area	inside of each tab	provides the active part of each tab consisting of settings, controls and measurement tools	sections, plots, sub-tabs, unit selections

## 4.1.2. Unique Set of Analysis Tools

All instruments feature a comprehensive tool set for connecting and synchronizing multiple instruments.

The following table gives the overview of all app icons. Note that the selection of app icons may depend on the upgrade options installed on a given instrument.

Table 4.2: Overview of app icons and short description











Control/ Tool	Option/ Range	Description
Files		Access settings and measurement data files on the host computer.
Config		Provides access to software configuration.
Ports		Control and status display of the ZSync ports.
Feedback		Control and display of the feedback pipeline.
Device		Provides instrument specific settings.
ZI Labs		Experimental settings and controls.

Table 4.3 provides a quick overview over the different status bar elements along with a short description.

Table 4.3: Status bar description

Control/ Tool	Option/ Range	Description
Command log	last command	Shows the last command. A different formatting (MATLAB, Python,..) can be set in the config tab. The log is also saved in [User]\Documents\Zurich Instruments\LabOne\WebServer\Log
Show Log		Show the command log history in a separate browser window.
Errors	Errors	Display system errors in separate browser tab.
Device	devXXX	Indicates the device serial number.
Identify Device		When active, device LED blinks
Shutdown		Shuts down the instrument.
CLK	yellow/ green/red	State of internal clocks. Yellow: Device is warming up and will be ready 30 minutes after power-up. Do not lock to external reference clock or start triggering yet. Green: Device is warmed up and ready to use. Red: Clocks have become unstable. Expect potential phase errors. This might be caused by temperature changes.
MDS	grey/green/ red/yellow	Multiple device synchronization indicator. Grey: Nothing to synchronize - single device on the UI. Green: All devices on the UI are correctly synchronized. Yellow: MDS sync in progress or only a subset of the connected devices is synchronized. Red: Devices not synchronized or error during MDS sync.

Control/Tool	Option/Range	Description
REC	grey/red	A blinking red indicator shows ongoing data recording (related to global recording settings in the Config tab).
CF	grey/yellow/red	Clock Failure - Red: present malfunction of the external 10 MHz reference oscillator. Yellow: indicates a malfunction occurred in the past.
COM	grey/yellow/red	Packet Loss - Red: present loss of data between the device and the host PC. Yellow: indicates a loss occurred in the past.
COM	grey/yellow/red	Sample Loss - Red: present loss of sample data between the device and the host PC. Yellow: indicates a loss occurred in the past.
C		Reset status flags: Clear the current state of the status flags
Full Screen		Toggles the browser between full screen and normal mode.

## 4.2. Ports Tab


The Ports tab provides control and displays the status of the 56 ZSync ports. It is available on all QHub instruments.

### 4.2.1. Features

- Display the state of the complete system at first glance
- Display port synchronization of all 56 ZSync ports
- Control of triggers that are sent to the connected instruments

### 4.2.2. Description

Table 4.4: App icon and short description

Control/Tool	Option/Range	Description
Ports		Control and status display of the ZSync ports.

The Ports tab (see [LabOne UI: Ports tab](#)) is divided into two sections: The ZSync ports and two sub-tabs for Control and Trigger.

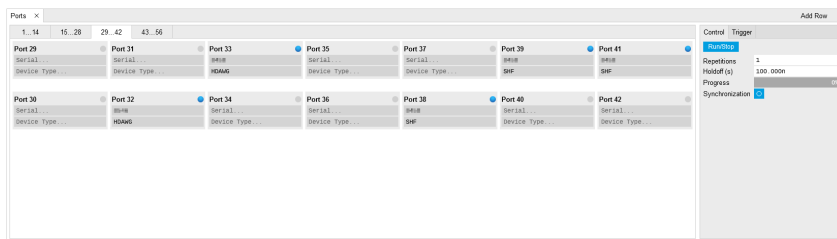


Figure 4.2: LabOne UI: Ports tab

The QHub is always used in conjunction with other Zurich Instruments devices in a larger system, e.g. a Quantum Computing Control System (QCCS). The purpose of the Ports tab is to allow the user to understand the current state of the complete system at first glance. The main elements are the 56 ports, organized in four sub-tabs, where the user can see information about the status and health of each connection and can reset the connection. Furthermore the user can start the sending of the triggers and control the repetitions and the holdoff of the triggers.

### 4.2.3. Functional Elements

Table 4.5: Ports tab

Control/Tool	Option/Range	Description
Connection Status	off/blue/yellow/red	Indicates the availability of the instrument connected to the port. Off: no Instrument detected. Yellow: connection to an instrument is in progress. Blue: connection to an instrument is ready or data is being sent to / received from an instrument. Red: an error has occurred on the connection to an instrument.
Serial		The device ID of the instrument connected to this port.
Device Type		The device type of the instrument connected to this port.
Run/Stop	Run/Stop	Starts sending triggers to all connected instruments over ZSync ports.
Repetitions		Sets the number of triggers sent over ZSync ports.
Holdoff	time in seconds	Sets the time between repeated triggers sent over ZSync ports.
Progress	0% to 100%	The percentage of repeated triggers sent over ZSync ports.
Synchronization		Enable synchronization. Trigger generation will only start once all workers have reported a ready status. Synchronization checks will be repeated with the same trigger generation settings (holdoff and repetitions) until synchronization is disabled.
Enable	ON / OFF	Enable Trigger Out connector.
Source Port		Select the ZSync port associated with the Trigger Out source.

## 4.3. Config Tab

The Config tab provides access to all major LabOne settings and is available on all QHub instruments.

### 4.3.1. Features

- Define instrument connection parameters
- Browser session control
- Define UI appearance (grids, theme, etc.)
- Store and load instrument settings and UI settings
- Configure data recording

### 4.3.2. Description

The Config tab serves as a control panel for all general LabOne settings and is opened by default on start-up. Whenever the tab is closed or an additional one of the same type is needed, clicking the following icon will open a new instance of the tab.

Table 4.6: App icon and short description

Control/Tool	Option/Range	Description
Config		Provides access to software configuration.

The Config tab (see [LabOne UI: Config tab](#)) is divided into four sections to control connections, sessions, settings, user interface appearance and data recording.

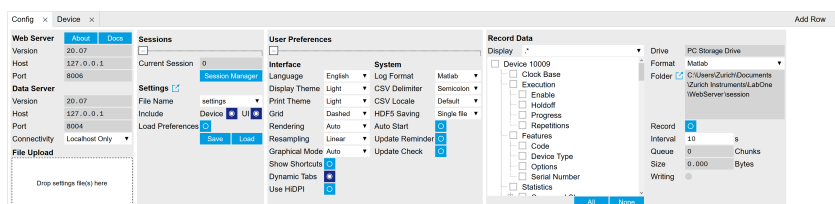


Figure 4.3: LabOne UI: Config tab



### 4.3. Config Tab

The **Connection** section provides information about connection and server versions. Access from remote locations can be restricted with the connectivity setting.

The **Session** section provides the session number which is also displayed in the status bar. Clicking on Session Dialog opens the session dialog window (same as start up screen) that allows one to load different settings files as well as to connect to other instruments.

The **Settings** section allows one to load and save instrument and UI settings. The saved settings are later available in the session dialog.

The **User Preferences** section contains the settings that are continuously stored and automatically reloaded the next time an QHub instrument is used from the same computer account.

For low ambient light conditions the use of the dark display theme is recommended (see Figure 4.4).

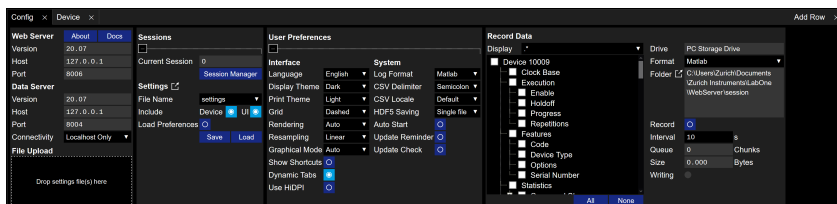




Figure 4.4: LabOne UI: Config tab - dark theme

### 4.3.3. Functional Elements

Table 4.7: Config tab

Control/Tool	Option/Range	Description
About	<b>About</b>	Get information about LabOne software.
Web Server Version and Revision	string	Web Server version and revision number
Host	default is localhost: 127.0.0.1	IP-Address of the LabOne Web Server
Port	4 digit integer	LabOne Web Server TCP/IP port
Data Server Version and Revision	string	Data Server version and revision number
Host	default is localhost: 127.0.0.1	IP-Address of the LabOne Data Server
Port	default is 8004	TCP/IP port used to connect to the LabOne Data Server.
Connect/Disconnect		Connect/disconnect the LabOne Data Server of the currently selected device. If a LabOne Data Server is connected only devices that are visible to that specific server are shown in the device list.
Status	grey/green	Indicates whether the LabOne User Interface is connected to the selected LabOne data server. Grey: no connection. Green: connected. Red: error while connecting.
Connectivity	From Everywhere	Forbid/Allow to connect to this Data Server from other computers.
	Localhost Only	
File Upload	drop area	Drag and drop files in this box to upload files. Clicking on the box opens a file dialog for file upload.  Supported files: Settings (*.xml).
Session Id	integer number	Session identifier. A session is a connection between a client and LabOne Data Server.
Session Manager	<b>Session Manager</b>	Open the session manager dialog. This allows for device or session change. The current session can be continued by pressing cancel.

Control/Tool	Option/Range	Description
File Name	selection of available file names	Save/load the device and user interface settings to/from the selected file on the internal flash drive. The setting files can be downloaded/uploaded using the Files tab.
Include		Enable Save/Load of particular settings.
	No Include Settings	Please enable settings type to be included during Save/Load.
	Include Device	Enable Save/Load of Device settings.
	Include UI	Enable Save/Load of User Interface settings.
	Include UI and Device	Enable Save/Load of User Interface and Device settings.
	Include Preferences	Enable loading of User Preferences from settings file.
	Include UI, Device and Preferences	Enable Save/Load of User Interface, Device and User Preferences.
Save		Save the user interface and device setting to a file.
Load		Load the user interface and device setting from a file.
Display Theme	Dark	Choose theme of the user interface.
	Light	
Plot Print Theme	Dark	Choose theme for printing SVG plots.
	Light	
Plot Grid	None	Select active grid setting for all SVG plots.
	Dashed	
	Solid	
Plot Rendering		Select rendering hint about what tradeoffs to make as the browser renders SVG plots. The setting has impact on rendering speed and plot display for both displayed and saved plots.
	Auto	Indicates that the browser shall make appropriate tradeoffs to balance speed, crisp edges and geometric precision, but with geometric precision given more importance than speed and crisp edges.
	Optimize Speed	The browser shall emphasize rendering speed over geometric precision and crisp edges. This option will sometimes cause the browser to turn off shape anti-aliasing.
	Crisp Edges	Indicates that the browser shall attempt to emphasize the contrast between clean edges of artwork over rendering speed and geometric precision. To achieve crisp edges, the user agent might turn off anti-aliasing for all lines and curves or possibly just for straight lines which are close to vertical or horizontal.
	Geometric Precision	Indicates that the browser shall emphasize geometric precision over speed and crisp edges.
Resampling Method		Select the resampling interpolation method. Resampling corrects for sample misalignment in subsequent scope shots. This is important when using reduced sample rates with a time resolution below that of the trigger.
	Linear	Linear interpolation
	PCHIP	Piecewise Cubic Hermite Interpolating Polynomial
Show Shortcuts	ON / OFF	Displays a list of keyboard and mouse wheel shortcuts for manipulating plots.
Dynamic Tabs	ON / OFF	If enabled, sections inside the application tabs are collapsed automatically depending on the window width.

Control/Tool	Option/Range	Description
Graphical Mode	Collapsed	Select the display mode for the graphical elements. Auto format will select the format which fits best the current window width.
	Auto	
	Expanded	
Log Format	.NET	Choose the command log format. See status bar and [User] \Documents\Zurich Instruments\LabOne\WebServer\Log
	MATLAB	
	Python	
CSV Delimiter	Tab	Select which delimiter to insert for CSV files.
	Comma	
	Semicolon	
CSV Locale	System locale. Use the symbols set in the language and region settings of the computer	Select the locale used for defining the decimal point and digit grouping symbols in numeric values in CSV files. The default locale uses dot for the decimal point and no digit grouping, e.g. 1005.07. The system locale uses the symbols set in the language and region settings of the computer.
	Default locale. Dot for the decimal point and no digit grouping, e.g. 1005.07	
HDF5 Saving	Multiple files. Each measurement goes in a separate file	For HDF5 file format only: Select whether each measurement should be stored in a separate file, or whether all measurements should be saved in a single file.
	Single file. All measurements go in one file	
Auto Start	ON / OFF	Skip session manager dialog at start-up if selected device is available.  In case of an error or disconnected device the session manager will be reactivated.
Update Reminder	ON / OFF	Display a reminder on start-up if the LabOne software wasn't updated in 180 days.
Update Check	ON / OFF	Periodically check for new LabOne software over the internet.
Drive		Select the drive for data saving.
Format	HDF5	File format of recorded and saved data.
	MATLAB	
	CSV	
Open Folder		Open recorded data in the system File Explorer.
Folder	path indicating file location	Folder containing the recorded data.
Save Interval	Time in seconds	Time between saves to disk. A shorter interval means less system memory consumption, but for certain file formats (e.g. MATLAB) many small files on disk. A longer interval means more system memory consumption, but for certain file formats (e.g. MATLAB) fewer, larger files on disk.
Queue	integer number	Number of data chunks not yet written to disk.
Size	integer number	Accumulated size of saved data in the current session.
Record	ON / OFF	Start and stop saving data to disk as defined in the selection filter. Length of the files is determined by the Window Length setting in the Plotter tab.
Writing	grey/green	Indicates whether data is currently written to disk.

Control/Tool	Option/Range	Description
Display	filter or regular expression	Display specific tree branches using one of the preset view filters or a custom regular expression.
Tree	ON / OFF	Click on a tree node to activate it.
All		Select all tree elements.
None		Deselect all tree elements.

## 4.4. Device Tab

The Device tab is the main settings tab for the connected instrument and is available on all QHub instruments.


### 4.4.1. Features

- Option and upgrade management
- External clock referencing
- Instrument connectivity parameters
- Device monitor

### 4.4.2. Description

The **Device tab** serves mainly as a control panel for all settings specific to the instrument that is controlled by LabOne in this particular session. Whenever the tab is closed or an additional one of the same type is needed, clicking the following icon will open a new instance of the tab.

Table 4.8: App icon and short description

Control/Tool	Option/Range	Description
Device		Provides instrument specific settings.

The Device tab (see [LabOne UI: Device tab](#)) is divided into five sections: general instrument information, configuration, device presets, communication parameters and a device monitor.

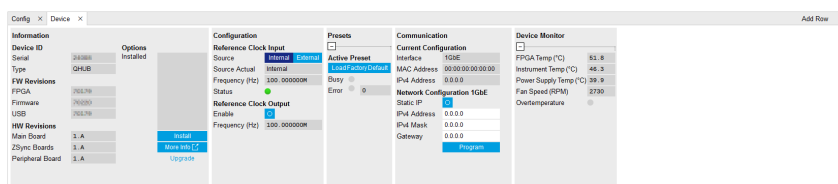


Figure 4.5: LabOne UI: Device tab

The **Information** section provides details about the instrument hardware and indicates the installed upgrade options. This is also the place where new options can be added by entering the provided option key.

The **Configuration** section allows one to change the reference from the internal clock to an external 10 MHz reference. The reference is to be connected to the External Clock In 10 MHz on the instrument back panel. The section also allows one to output the instrument 100 MHz clock, which is generated at the External Clock Out 100 MHz on the instrument back panel.

### Note

Any change to the reference clock setting, either input and output, will disconnect all the devices connected over ZSync. The connections will not be automatically re-established and that should be done manually on every instrument.



The **Presets** section allows one to reset the instrument to the factory defaults.

The **Communication** section offers access to the instruments TCP/IP settings.

The **Device Monitor** section is collapsed by default and generally only needed for servicing. It displays vitality signals of some of the instrument's hardware components.

### 4.4.3. Functional Elements

Table 4.9: Device tab

Control/Tool	Option/Range	Description
Serial	1-4 digit number	Device serial number
Type	string	Device type
FPGA	integer number	HDL firmware revision.
Digital Board	version number	Hardware revision of the FPGA base board.
ZSync Board	version number	Hardware revision of the ZSync board.
Peripheral Board	version number	Hardware revision of the peripheral board.
Firmware	integer number	Revision of the device internal controller software.
FX3 USB	version number	USB firmware revision.
Installed Options	short names for each option	Options that are installed on this device.
Install		Click to install options on this device. Requires a unique feature code and a power cycle after entry.
More Information		Display additional device information in a separate browser tab.
Upgrade Device Options		Display available upgrade options.
Input Reference Clock Source		Selects internal or external reference clock source. When the source is changed, all the instruments connected with ZSync links will be disconnected.
	Internal	The internal 100MHz clock is used as the frequency and time base reference.
	External	An external clock is intended to be used as the frequency and time base reference. Provide a clean and stable 10MHz or 100MHz reference to the appropriate back panel connector.
Actual Input Reference Clock Source		Currently active clock source. This might differ from the Set Source choice if the set clock is not available.
	Internal	Internal 100MHz clock is actually used as the frequency and time base reference.
	External	An external clock is actually used as the frequency and time base reference.
Input Reference Clock Frequency		Indicates the frequency of the input reference clock.
Input Reference Clock Status		Indicates the status of the input reference clock. Green: locked. Yellow: the device is busy trying to lock onto the input reference clock signal. Red: there was an error locking onto the input reference clock signal. The instrument is currently not operational.
Output Reference Clock Enable		Enable clock signal on the reference clock output.
		Selects the frequency of the output reference clock to be 10MHz or 100MHz.
Load Factory Default		Load the factory default settings.
Busy	grey/red	Indicates that the device is busy with either loading, saving or erasing a preset.

Control/Tool	Option/Range	Description
Error		Returns a 0 if the last preset operation was successfully completed or 1 if the last preset operation was illegal.
	0	Last preset operation was successfully completed.
	1	Last preset operation was illegal.
Error LED	grey/red	Turns red if the last operation was illegal.
Interface		Active interface between device and data server. In case multiple options are available, the priority as indicated on the left applies.
MAC Address	80:2F:DE:xx:xx:xx	MAC address of the device. The MAC address is defined statically, cannot be changed and is unique for each device.
IPv4 Address	default 192.168.1.10	Current IP address of the device. This IP address is assigned dynamically by a DHCP server, defined statically, or is a fall-back IP address if the DHCP server could not be found (for point to point connections).
Static IP	ON / OFF	Enable this flag if the device is used in a network with fixed IP assignment without a DHCP server.
IPv4 Address	default 192.168.1.10	Static IP address to be written to the device.
IPv4 Mask	default 255.255.255.0	Static IP mask to be written to the device.
Gateway	default 192.168.1.1	Static IP gateway
Program	<a href="#">Program</a>	Click to program the specified IPv4 address, IPv4 Mask and Gateway to the device.
Pending	integer value	Number of buffers ready for receiving command packets from the device.
Processing	integer value	Number of buffers being processed for command packets. Small values indicate proper performance. For a TCP/IP interface, command packets are sent using the TCP protocol.
Packet Loss	integer value	Number of command packets lost since device start. Command packets contain device settings that are sent to and received from the device.
Bandwidth	numeric value	Command streaming bandwidth usage on the physical network connection between device and data server.
Pending	integer value	Number of buffers ready for receiving data packets from the device.
Processing	integer value	Number of buffers being processed for data packets. Small values indicate proper performance. For a TCP/IP interface, data packets are sent using the UDP protocol.
Packet Loss	integer value	Number of data packets lost since device start. Data packets contain measurement data.
Bandwidth	numeric value	Data streaming bandwidth usage on the physical network connection between device and data server.
Overtemperature	numeric value	Indicator is red if the temperature of the FPGA exceeds 85°C. It will be reset after a restart of the device.


## 4.5. File Manager Tab

### 4.5.1. Features

- File preview for settings files and log files

### 4.5.2. Description

Table 4.10: App icon and short description

Control/Tool	Option/Range	Description
Files		Access settings and measurement data files on the host computer.

The Files tab (see [LabOne UI: File Manager tab](#)) provides three windows for exploring. The left window allows one to browse through the directory structure, the center window shows the files of the folder selected in the left window, and the right window displays the content of the file selected in the center window, e.g. a settings file or log file.

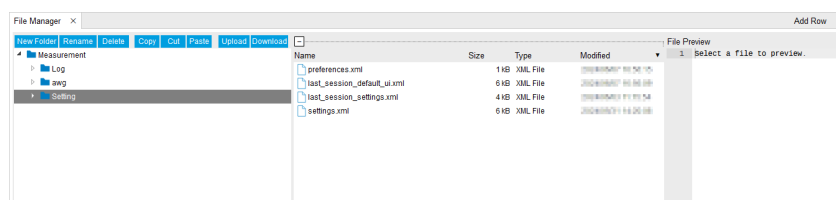










Figure 4.6: LabOne UI: File Manager tab

### 4.5.3. Functional Elements


Table 4.11: File tab

Control/Tool	Option/Range	Description
New Folder		Create new folder at current location.
Rename		Rename selected file or folder.
Delete		Delete selected file(s) and/or folder(s).
Copy		Copy selected file(s) and/or folder(s) to Clipboard.
Cut		Cut selected file(s) and/or folder(s) to Clipboard.
Paste		Paste file(s) and/or folder(s) from Clipboard to the selected directory.
Upload		Upload file(s) and/or folder(s) to the selected directory.
Download		Download selected file(s) and/or folder(s).

## 4.6. ZI Labs Tab

The ZI Labs tab contains experimental LabOne functionalities added by the ZI development team. The settings found here are often relevant to special applications, but have not yet found their definitive place in one of the other LabOne tabs. Naturally this tab is subject to frequent changes, and the documentation of the individual features would go beyond the scope of this user manual. Clicking the following icon will open a new instance of the tab.

Table 4.12: App Icon and short description

Control/Tool	Option/Range	Description
ZI Labs		Experimental settings and controls.

# 5. Specifications

## Important

Unless otherwise stated, all specifications apply after 30 minutes of instrument warm-up.

## Important

Important changes in the specification parameters are explicitly mentioned in the revision history of this document.

## 5.1. QCCS system specifications

Parameter	min	typ	max
Supported peripheral devices	SHFQC, HDAWG, SHFSG, SHFQA		
Supported system architecture	Star architecture		
Output channel skew	-	-	1.6 ns
Output channel skew repeatability over restarts	-	-	200 ps
Real-time communication latency	-	-	90 ns
Sample rate	-	2.0 GSa/s	-

## 5.2. Synchronization and real-time data exchange interface

Parameter	Value
Interface type	ZSync proprietary
Number of ports	56
Cable length	3m

## 5.3. Analog Interface Specifications

Table 5.1: Triggers

Parameter	Details	min	typ	max
Inputs	-	4		
Input voltage range	50 $\Omega$ impedance	0 V	-	3.3 V
Input threshold	-	-	1.0 V	-
Outputs	-	4		
Output voltage range	50 $\Omega$ impedance	0 V	-	3.3 V
Impedance	-	50 $\Omega$		
Coupling	-	DC		
Connectors type	-	SMA		



Table 5.2: Clocks

Parameter	Details	min	typ	max
Interfaces	-	Input, Output and Sysref output		
Input frequency	-	10 MHz		
Input amplitude	50 $\Omega$ impedance	-10 dBm (200 mVpp)	-	+13 dBm (2.5 Vpp)
Input coupling	-	AC		
Output frequency	-	100 MHz		
Output amplitude	50 $\Omega$ impedance	+4 dBm (1.0 Vpp)		
Output coupling	-	DC		
Impedance	-	50 $\Omega$		
Connectors type	-	SMA		

## 5.4. General Specifications

Table 5.3: General and storage

Parameter	min	typ	max
storage temperature	-25 °C	-	65 °C
storage relative humidity (non-condensing)	-	-	95%
operating temperature	5 °C	-	40 °C
operating relative humidity (non-condensing)	-	-	90%
specification temperature	18 °C	-	28 °C
power consumption	-	-	120 W
operating environment	IEC61010, indoor location, installation category II, pollution degree 2		
operating altitude	up to 2000 meters		
power supply AC line	100-240 V ( $\pm$ 10%), 50/60 Hz		
dimensions with handles and feet	45.0 $\times$ 46.0 $\times$ 14.5 cm, 17.6 $\times$ 18.1 $\times$ 5.7 inch, 19 inch rack compatible		
weight	8.0 kg		
recommended calibration interval	2 years		

Table 5.4: Host computer requirements

Parameter	Description
supported Windows operating systems	Windows 10, 11 on x86-64
supported macOS operating systems	macOS 10.11+ on x86-64 and ARMv8
supported Linux distributions	GNU/Linux (Ubuntu 14.04+, CentOS 7+, Debian 8+) on x86-64 and ARMv8
supported processors	x86-64 (Intel, AMD), ARMv8 (e.g., Raspberry Pi 4 and newer, Apple M-series)

Table 5.5: Digital Interface Specifications

Parameter	Description
host computer connection	1GbE, LAN / Ethernet
	USB 3.0

#### 5.4. General Specifications

Parameter	Description
Debug interface	JTAG (over USB)

# 6. Device Node Tree

This chapter contains reference documentation for the settings and measurement data available on QHub Instruments. Whilst [Functional Description](#) describes many of these settings in terms of the features available in the LabOne User Interface, this chapter describes them on the device level and provides a hierarchically organized and comprehensive list of device functionality.

Since these settings and data streams may be written and read using the LabOne APIs (Application Programming Interfaces) this chapter is of particular interest to users who would like to perform measurements programmatically via LabVIEW, Python, MATLAB, .NET or C.

Please see:

- [Introduction](#) for an introduction of how the instrument's settings and measurement data are organized hierarchically in the Data Server's so-called "Node Tree".
- [Reference Node Documentation](#) for a reference list of the settings and measurement data available on QHub Instruments, organized by branch in the Node Tree.

## 6.1. Introduction

This chapter provides an overview of how an instrument's configuration and output is organized by the Data Server.

All communication with an instrument occurs via the Data Server program the instrument is connected to (see [LabOne Software Architecture](#) for an overview of LabOne's software components). Although the instrument's settings are stored locally on the device, it is the Data Server's task to ensure it maintains the values of the current settings and makes these settings (and any subscribed data) available to all its current clients. A client may be the LabOne User Interface or a user's own program implemented using one of the LabOne Application Programming Interfaces, e.g., Python.

The instrument's settings and data are organized by the Data Server in a file-system-like hierarchical structure called the node tree. When an instrument is connected to a Data Server, its device ID becomes a top-level branch in the Data Server's node tree. The features of the instrument are organized as branches underneath the top-level device branch and the individual instrument settings are leaves of these branches.

For example, the auxiliary outputs of the instrument with device ID "dev1000" are located in the tree in the branch:

```
/dev1000/auxouts/
```

In turn, each individual auxiliary output channel has its own branch underneath the "AUXOUTS" branch.

```
/dev1000/auxouts/0/  
/dev1000/auxouts/1/  
/dev1000/auxouts/2/  
/dev1000/auxouts/3/
```

Whilst the auxiliary outputs and other channels are labelled on the instrument's panels and the User Interface using 1-based indexing, the Data Server's node tree uses 0-based indexing. Individual settings (and data) of an auxiliary output are available as leaves underneath the corresponding channel's branch:

```
/dev1000/auxouts/0/demodselect  
/dev1000/auxouts/0/limitlower  
/dev1000/auxouts/0/limitupper  
/dev1000/auxouts/0/offset  
/dev1000/auxouts/0/outputselect  
/dev1000/auxouts/0/preoffset  
/dev1000/auxouts/0/scale  
/dev1000/auxouts/0/value
```

These are all individual node paths in the node tree; the lowest-level nodes which represent a single instrument setting or data stream. Whether the node is an instrument setting or data-stream and

which type of data it contains or provides is well-defined and documented on a per-node basis in the Reference Node Documentation section in the relevant instrument-specific user manual. The different properties and types are explained in [Node Properties and Data Types](#).

For instrument settings, a Data Server client modifies the node's value by specifying the appropriate path and a value to the Data Server as a (path, value) pair. When an instrument's setting is changed in the LabOne User Interface, the path and the value of the node that was changed are displayed in the Status Bar in the bottom of the Window. This is described in more detail in [Exploring the Node Tree](#).

## Module Parameters

LabOne Core Modules, such as the Sweeper, also use a similar tree-like structure to organize their parameters. Please note, however, that module nodes are not visible in the Data Server's node tree; they are local to the instance of the module created in a LabOne client and are not synchronized between clients.

### 6.1.1. Node Properties and Data Types

A node may have one or more of the following properties:

Property	Description
Read	Data can be read from the node.
Write	Data can be written to the node.
Setting	The node corresponds to a writable instrument configuration. The data of these nodes are persisted in snapshots of the instrument and stored in the LabOne XML settings files.
Streaming	A node with the read attribute that provides instrument data, typically at a user-configured rate. The data is usually a more complex data type, for example demodulator data is returned as <b>ZIDemodSample</b> . A full list of streaming nodes is available in the Programming Manual in the Chapter Instrument Communication. Their availability depends on the device class (e.g. MF) and the option set installed on the device.
Pipelined	If the sequence pipeliner mode is off the value set to the node is applied immediately. Otherwise, it goes to the staging area of the sequence pipeliner instead. Multiple pipelined nodes can be programmed as part of a job definition, that is finalized by writing a one to the relevant <b>commit</b> node.

A node may contain data of the following types:

Integer	Integer data.
Double	Double precision floating point data.
String	A string array.
Integer (enumerated)	As for Integer, but the node only allows certain values.
Composite data type	For example, <b>ZIDemodSample</b> . These custom data types are structures whose fields contain the instrument output, a timestamp and other relevant instrument settings such as the demodulator oscillator frequency. Documentation of custom data types is available in

### 6.1.2. Exploring the Node Tree

#### In the LabOne User Interface

A convenient method to learn which node is responsible for a specific instrument setting is to check the Command Log history in the bottom of the LabOne User Interface. The command in the Status Bar gets updated every time a configuration change is made. [Figure 6.1](#) shows how the equivalent

MATLAB command is displayed after modifying the value of the auxiliary output 1's offset. The format of the LabOne UI's command history can be configured in the Config Tab (MATLAB, Python and .NET are available). The entire history generated in the current UI session can be viewed by clicking the "Show Log" button.

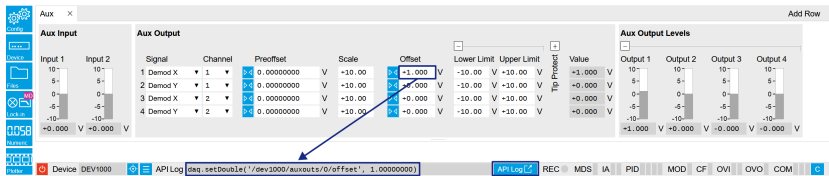


Figure 6.1: When a device's configuration is modified in the LabOne User Interface, the Status Bar displays the equivalent command to perform the same configuration via a LabOne programming interface. Here, the MATLAB code to modify auxiliary output 1's offset value is provided. When "Show Log" is clicked the entire configuration history is displayed in a new browser tab.

## In a LabOne Programming Interface

A list of nodes (under a specific branch) can be requested from the Data Server in an API client using the `listNodes` command (MATLAB, Python, .NET) or `ziAPIListNodes()` function (C API). Please see each API's command reference for more help using the `listNodes` command. To obtain a list of all the nodes that provide data from an instrument at a high rate, so-called streaming nodes, the `streamingonly` flag can be provided to `listNodes`. More information on data streaming and streaming nodes is available in the LabOne Programming Manual.

The detailed descriptions of nodes that is provided in [Reference Node Documentation](#) is accessible directly in the LabOne MATLAB or Python programming interfaces using the "help" command. The `help` command is `daq.help(path)` in Python and `ziDAQ('help', path)` in MATLAB. The command returns a description of the instrument node including access properties, data type, units and available options. The "help" command also handles wildcards to return a detailed description of all nodes matching the path. An example is provided below.

```
daq = zhinst.core.ziDAQServer('localhost', 8004, 6)
daq.help('/dev1000/auxouts/0/offset')
# Out:
# /dev1000/auxouts/0/OFFSET#
# Add the specified offset voltage to the signal after scaling. Auxiliary
Output
# Value = (Signal+Preoffset)*Scale + Offset
# Properties: Read, Write, Setting
# Type: Double
# Unit: V
```

### 6.1.3. Data Server Nodes

The Data Server has nodes in the node tree available under the top-level `/zi/` branch. These nodes give information about the version and state of the Data Server the client is connected to. For example, the nodes:

- ─ `/zi/about/version`
- ─ `/zi/about/revision`

are read-only nodes that contain information about the release version and revision of the Data Server. The nodes under the `/zi/devices/` list which devices are connected, discoverable and visible to the Data Server.

The nodes:

- ─ `/zi/config/open`
- ─ `/zi/config/port`

are settings nodes that can be used to configure which port the Data Server listens to for incoming client connections and whether it may accept connections from clients on hosts other than the localhost.

Nodes that are of particular use to programmers are:

- `/zi/debug/logpath` - the location of the Data Server's log in the PC's file system,
- `/zi/debug/level` - the current log-level of the Data Server (configurable; has the Write attribute),
- `/zi/debug/log` - the last Data Server log entries as a string array.

The Global nodes of the LabOne Data Server are listed in the Instrument Communication chapter of the LabOne Programming Manual

## 6.2. Reference Node Documentation

This section describes all the nodes in the data server's node tree organized by branch.

### 6.2.1. CLOCKBASE

#### `/dev..../clockbase`

**Properties:** Read  
**Type:** Double  
**Unit:** Hz

Returns the internal clock frequency of the device.

### 6.2.2. EXECUTION

#### `/dev..../execution/enable`

**Properties:** Read, Write  
**Type:** Integer (64 bit)  
**Unit:** None

Activate the trigger generation. Auto-resets to zero when done.

#### `/dev..../execution/holdoff`

**Properties:** Read, Write, Setting  
**Type:** Double  
**Unit:** s

Hold-off time between repeated triggers.

#### `/dev..../execution/progress`

**Properties:** Read  
**Type:** Double  
**Unit:** None

The fraction of the triggers generated so far.

#### `/dev..../execution/repetitions`

**Properties:** Read, Write, Setting  
**Type:** Integer (64 bit)  
**Unit:** None

Number of triggers to be generated.

**/dev..../execution/synchronization/enable**

**Properties:** Read, Write, Setting  
**Type:** Integer (64 bit)  
**Unit:** None

Enable synchronization. Trigger generation will only start once all workers have reported a ready status. Synchronization checks will be repeated with the same trigger generation settings (holdoff and repetitions) until synchronization is disabled.

## 6.2.3. FEATURES

**/dev..../features/code**

**Properties:** Write  
**Type:** String  
**Unit:** None

Node providing a mechanism to write feature codes.

**/dev..../features/devtype**

**Properties:** Read  
**Type:** String  
**Unit:** None

Returns the device type.

**/dev..../features/options**

**Properties:** Read  
**Type:** String  
**Unit:** None

Returns enabled options.

**/dev..../features/serial**

**Properties:** Read  
**Type:** String  
**Unit:** None

Device serial number.

## 6.2.4. STATS

**/dev..../stats/physical/currents/n**

**Properties:** Read  
**Type:** Double  
**Unit:** mA

Internal current measurements.

**/dev..../stats/physical/fanspeeds/n**

**Properties:** Read  
**Type:** Integer (64 bit)  
**Unit:** RPM

Speed of the internal cooling fans for monitoring.

**/dev..../stats/physical/fpga/aux**

**Properties:** Read  
**Type:** Double  
**Unit:** V

Supply voltage of the FPGA.

**/dev..../stats/physical/fpga/core**

**Properties:** Read  
**Type:** Double  
**Unit:** V

Core voltage of the FPGA.

**/dev..../stats/physical/fpga/pstemp**

**Properties:** Read  
**Type:** Double  
**Unit:** °C

Internal temperature of the FPGA's processor system.

**/dev..../stats/physical/fpga/temp**

**Properties:** Read  
**Type:** Double  
**Unit:** °C

Internal temperature of the FPGA.

**/dev..../stats/physical/overtemperature**

**Properties:** Read  
**Type:** Integer (64 bit)  
**Unit:** None

This flag is set to 1 if the temperature of the FPGA exceeds 85°C. It will be reset to 0 after a restart of the device.

**/dev..../stats/physical/power/currents/n**

**Properties:** Read  
**Type:** Double  
**Unit:** A

Currents of the main power supply.

**/dev..../stats/physical/power/temperatures/n**

**Properties:** Read  
**Type:** Double  
**Unit:** °C

Temperatures of the main power supply.

**/dev..../stats/physical/power/voltages/n**

**Properties:** Read  
**Type:** Double  
**Unit:** V

Voltages of the main power supply.



**/dev..../stats/physical/temperatures/n**

**Properties:** Read  
**Type:** Double  
**Unit:** °C

Internal temperature measurements.

**/dev..../stats/physical/voltages/n**

**Properties:** Read  
**Type:** Double  
**Unit:** V

Internal voltage measurements.

## 6.2.5. STATUS

**/dev..../status/flags/binary**

**Properties:** Read  
**Type:** Integer (64 bit)  
**Unit:** None

**/dev..../status/time**

**Properties:** Read  
**Type:** Integer (64 bit)  
**Unit:** None

The current timestamp.

## 6.2.6. SYSTEM

**/dev..../system/activeinterface**

**Properties:** Read  
**Type:** String  
**Unit:** None

Currently active interface of the device.

**/dev..../system/boardrevisions/n**

**Properties:** Read  
**Type:** String  
**Unit:** None

Hardware revision of the FPGA base board

**/dev..../system/clocks/referenceclock/in/freq**

**Properties:** Read  
**Type:** Double  
**Unit:** Hz

Indicates the frequency of the reference clock.

**/dev..../system/clocks/referenceclock/in/source**

**Properties:** Read, Write, Setting  
**Type:** Integer (enumerated)  
**Unit:** None

The intended reference clock source. When the source is changed, all the instruments connected with ZSync links will be disconnected. The connection should be re-established manually.

0 "internal": The internal clock is intended to be used as the frequency and time base reference.  
 1 "external": An external clock is intended to be used as the frequency and time base reference. Provide a clean and stable 10 MHz or 100 MHz reference to the appropriate back panel connector.

**/dev..../system/clocks/referenceclock/in/sourceactual**

**Properties:** Read  
**Type:** Integer (enumerated)  
**Unit:** None

The actual reference clock source.

0 "internal": The internal clock is used as the frequency and time base reference.  
 1 "external": An external clock is used as the frequency and time base reference.

**/dev..../system/clocks/referenceclock/in/status**

**Properties:** Read  
**Type:** Integer (enumerated)  
**Unit:** None

Status of the reference clock.

0 "locked": Reference clock has been locked on.  
 1 "error": There was an error locking onto the reference clock signal.  
 2 "busy": The device is busy trying to lock onto the reference clock signal.

**/dev..../system/clocks/referenceclock/out/enable**

**Properties:** Read, Write, Setting  
**Type:** Integer (64 bit)  
**Unit:** None

Enable clock signal on the reference clock output. When the clock output is turned on or off, all the instruments connected with ZSync links will be disconnected. The connection should be re-established manually.

**/dev..../system/clocks/referenceclock/out/freq**

**Properties:** Read, Write, Setting  
**Type:** Double  
**Unit:** Hz

Select the frequency of the output reference clock. Only 10 MHz and 100 MHz are allowed.

**/dev..../system/fpgarevision**

**Properties:** Read  
**Type:** Integer (64 bit)  
**Unit:** None

HDL firmware revision.

**/dev..../system/fwlog**

**Properties:** Read  
**Type:** String  
**Unit:** None

Returns log output of the firmware.

**/dev..../system/fwlogenable**

**Properties:** Read, Write  
**Type:** Integer (64 bit)  
**Unit:** None

Enables logging to the fwlog node.

**/dev..../system/fwrevision**

**Properties:** Read  
**Type:** Integer (64 bit)  
**Unit:** None

Revision of the device-internal controller software.

**/dev..../system/identify**

**Properties:** Read, Write  
**Type:** Integer (64 bit)  
**Unit:** None

Setting this node to 1 will cause the device to blink the power led for a few seconds.

**/dev..../system/kerneltype**

**Properties:** Read  
**Type:** String  
**Unit:** None

Returns the type of the data server kernel (mdk or hpk).

**/dev..../system/nics/n/defaultgateway**

**Properties:** Read, Write  
**Type:** String  
**Unit:** None

Default gateway configuration for the network connection.

**/dev..../system/nics/n/defaultip4**

**Properties:** Read, Write  
**Type:** String  
**Unit:** None

IPv4 address of the device to use if static IP is enabled.

**/dev..../system/nics/n/defaultmask**

**Properties:** Read, Write  
**Type:** String  
**Unit:** None

IPv4 mask in case of static IP.

**/dev..../system/nics/n/gateway**

**Properties:** Read  
**Type:** String  
**Unit:** None

Current network gateway.

**/dev..../system/nics/n/ip4**

**Properties:** Read  
**Type:** String  
**Unit:** None

Current IPv4 of the device.

**/dev..../system/nics/n/mac**

**Properties:** Read  
**Type:** String  
**Unit:** None

Current MAC address of the device network interface.

**/dev..../system/nics/n/mask**

**Properties:** Read  
**Type:** String  
**Unit:** None

Current network mask.

**/dev..../system/nics/n/saveip**

**Properties:** Read, Write  
**Type:** Integer (64 bit)  
**Unit:** None

If written, this action will program the defined static IP address to the device.

**/dev..../system/nics/n/static**

**Properties:** Read, Write  
**Type:** Integer (64 bit)  
**Unit:** None

Enable this flag if the device is used in a network with fixed IP assignment without a DHCP server.

**/dev..../system/preset/busy**

**Properties:** Read  
**Type:** Integer (64 bit)  
**Unit:** None

Indicates if presets are currently loaded.

**/dev..../system/preset/error**

**Properties:** Read  
**Type:** Integer (64 bit)  
**Unit:** None

Indicates if the last operation was illegal. Successful: 0, Error: 1.

**/dev..../system/preset/load**

**Properties:** Read, Write  
**Type:** Integer (64 bit)  
**Unit:** None

Load the selected preset.

**/dev..../system/properties/timebase**

**Properties:** Read  
**Type:** Double  
**Unit:** s

Minimal time difference between two timestamps. The value is equal to 1/(maximum sampling rate).

**/dev..../system/shutdown**

**Properties:** Read, Write  
**Type:** Integer (64 bit)  
**Unit:** None

Sending a '1' to this node initiates a shutdown of the operating system on the device. It is recommended to trigger this shutdown before switching the device off with the hardware switch at the back side of the device.

**/dev..../system/stall**

**Properties:** Read, Write  
**Type:** Integer (64 bit)  
**Unit:** None

Indicates if the network connection is stalled.

**/dev..../system/swtriggers/n/single**

**Properties:** Read, Write  
**Type:** Integer (64 bit)  
**Unit:** None

Issues a single software trigger event.

**/dev..../system/update**

**Properties:** Read, Write  
**Type:** Integer (64 bit)  
**Unit:** None

Requests update of the device firmware and bitstream from the dataserver.

## 6.2.7. TRIGGERS

**/dev..../triggers/out/n/enable**

**Properties:** Read, Write, Setting  
**Type:** Integer (64 bit)  
**Unit:** None

Enable the Trigger Out.

**/dev..../triggers/out/n/port**

**Properties:** Read, Write, Setting  
**Type:** Integer (64 bit)  
**Unit:** None

The ZSync port associated with the Trigger Out source.

**/dev..../triggers/out/n/pulsewidth**

**Properties:** Read  
**Type:** Double  
**Unit:** s

**/dev..../triggers/out/n/source**

**Properties:** Read, Write, Setting  
**Type:** Integer (64 bit)  
**Unit:** None

## 6.2.8. ZSYNCS

**/dev..../zsyncs/n/connection/alias**

**Properties:** Read, Write, Setting  
**Type:** ZIVectorData  
**Unit:** None

User-given name to the instrument connected to this port.

**/dev..../zsyncs/n/connection/devtype**

**Properties:** Read  
**Type:** ZIVectorData  
**Unit:** None

The device type of the instrument connected to this port.

**/dev..../zsyncs/n/connection/serial**

**Properties:** Read  
**Type:** ZIVectorData  
**Unit:** None

The device ID of the instrument connected to this port.

**/dev..../zsyncs/n/connection/status**

**Properties:** Read  
**Type:** Integer (enumerated)  
**Unit:** None

The current status of the instrument connected to the port.

0	No connection
1	Connection in progress
2	Connected
3	Connection error